 
 
 

 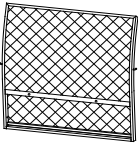






SAVE THESE INSTRUCTIONS
SONOMA BISCAIY CUDDLE CHAIR ASSEMBLY INSTRUCTIONS
STYLE #: 71SRRWK28
ASSEMBLE ON A FLAT, PROTECTED SURFACE.

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	LEFT ARM
B		1 PC	RIGHT ARM
C		1 PC	SEAT
D		1 PC	BACK
E		10 PCS + 1 PC	BOLT (M6*30MM)
F		10 PCS + 1 PC	FLAT WASHER
G		1 PC	ALLEN WRENCH
H		1 PC	SEAT CUSHION
I		1 PC	BACK CUSHION

ASSEMBLY INSTRUCTIONS (CONTINUED)

  
STYLE #: 71SRRWK28

STEP 1

A. INSERT THE HOOKS ON BACK (D) INTO HOLES ON LEFT ARM (A) AND RIGHT ARM (B).

B. CONNECT LEFT ARM (A) TO BACK (D) WITH BOLTS (E) AND FLAT WASHERS (F) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

C. CONNECT RIGHT ARM (B) TO BACK (D) WITH BOLTS (E) AND FLAT WASHERS (F) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

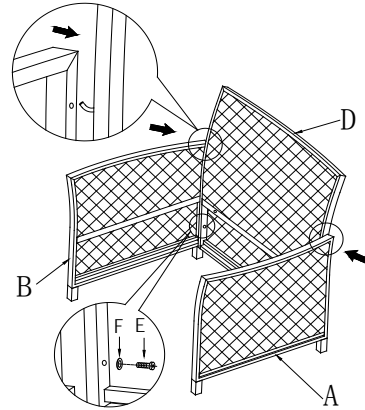

STEP 2


A. ROTATE CHAIR TO UPSIDE DOWN POSITION.

B. CONNECT SEAT (C) TO BACK (D) WITH BOLTS (E) AND FLAT WASHERS (F) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

C. CONNECT LEFT ARM (A) TO SEAT (C) WITH BOLTS (E) AND FLAT WASHERS (F) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

D. CONNECT RIGHT ARM (B) TO SEAT (C) WITH BOLTS (E) AND FLAT WASHERS (F) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

E. TIGHTEN COMPLETELY ALL BOLTS (E) FROM STEPS 1 AND 2.

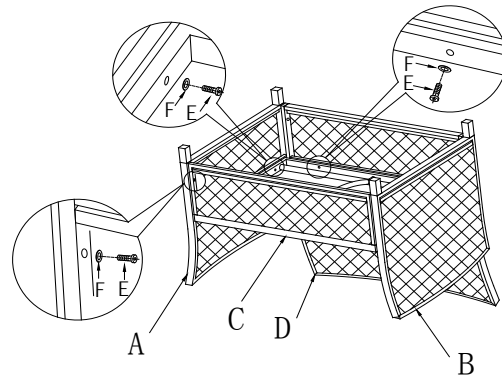


STEP 3

A. PLACE SEAT CUSHION (H) ON SEAT (C) AND SECURE HOOK AND LOOP TAPES FROM THE BOTTOM OF CHAIR.

B. ROTATE CHAIR TO THE UPRIGHT POSITION.

C. PLACE BACK CUSHION (I) ON CHAIR.

D. ASSEMBLY IS COMPLETE.


 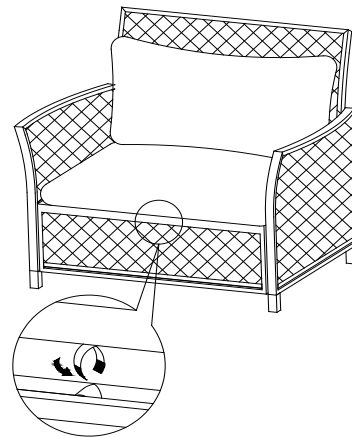

 





SAVE THESE INSTRUCTIONS

SONOMA BISCAI CUDDLE OTTOMAN ASSEMBLY INSTRUCTIONS

STYLE #: 71SRRWK28

 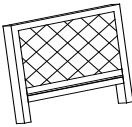ASSEMBLE ON A FLAT, PROTECTED SURFACE.


PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		2	LEG
B		2	SIDE
C		1	SEAT
D		12 PCS + 1 PC	BOLT (M6*30MM)
E		12 PCS + 1 PC	FLAT WASHER
F		1	ALLEN WRENCH
G		1	CUSHION

ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 71SRRWK28

STEP 1


A. CONNECT LEGS (A) AND SIDES (B) WITH BOLTS (D) AND FLAT WASHERS (E) USING ALLEN WRENCH (F). DO NOT TIGHTEN COMPLETELY.

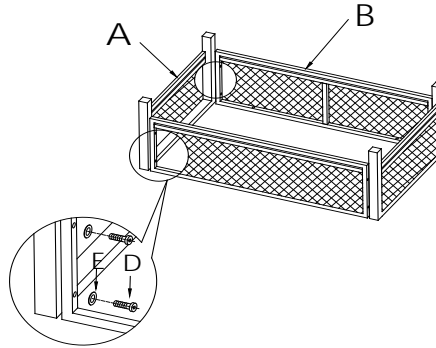

STEP 2

A. PLACE SEAT (C) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.

B. CONNECT PREASSEMBLED UNIT TO SEAT (C) WITH BOLTS (D) AND FLAT WASHERS (E) USING ALLEN WRENCH (F). DO NOT TIGHTEN COMPLETELY.

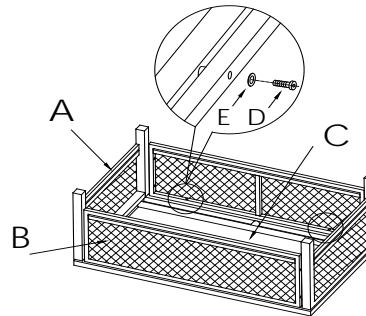

STEP 3

A. TIGHTEN ALL BOLTS (D) WITH ALLEN WRENCH (F).


B. PLACE CUSHION (G) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.

C. PLACE OTTOMAN UPSIDE DOWN ON CUSHION (G).

D. SECURE HOOK AND LOOP TAPES ON CUSHION (G) TO OTTOMAN.

E. ROTATE OTTOMAN TO THE UPRIGHT POSITION.

F. ASSEMBLY IS COMPLETE.

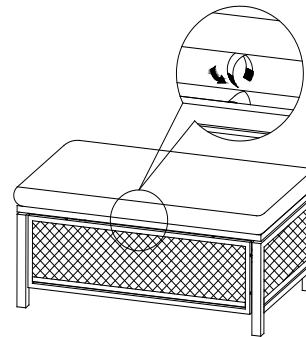

** WE RECOMMEND THAT YOU SAVE THE ALLEN WRENCH (G&F) AND PERIODICALLY TIGHTEN ALL BOLTS.

WEIGHT LIMIT

CHAIR: 500 LBS: OTTOMAN: 300 LBS

CARE AND CLEANING

FRAME: WIPE CLEAN WITH A MILD SOAP AND WATER SOLUTION, RINSE WITH CLEAN WATER, AND DRY THOROUGHLY.

CUSHION: SPOT CLEAN WITH A SOFT CLOTH.

DO NOT STAND OR CLIMB ON CHAIR OR OTTOMAN.

IN ORDER TO PROLONG THE LIFE OF YOUR CHAIR, PLEASE STORE IN DRY SHELTERED PLACE WHEN NOT IN USE OR DURING INCLEMENT WEATHER.

WARRANTY

1 YEAR LIMITED WARRANTY. COMMERCIAL USE, ACTS OF NATURE, FIRE, FREEZING, ABUSIVE USE, DISCOLORATION OR FADING OF THE FINISH OR FABRICS AS RESULT OF CHEMICALS OR SPILLS IS NOT COVERED. PROOF OF PURCHASE (DATED RECEIPT) IS REQUIRED FOR WARRANTY CLAIMS. WE RESERVE THE RIGHT TO MAKE SUBSTITUTIONS WITH SIMILAR MERCHANDISE.