 
 
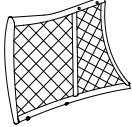 
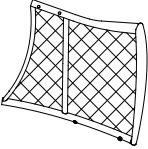 
 
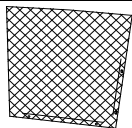 





 
 





SAVE THESE INSTRUCTIONS

SONOMA BISCAY MOTION CHAIR ASSEMBLY INSTRUCTIONS

STYLE #: 71SRRWK43

ASSEMBLE ON A FLAT, PROTECTED SURFACE.

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	LEFT ARM
B		1 PC	RIGHT ARM
C		1 PC	SEAT
D		1 PC	BACK
E		1 PC	BASE
F		6 PCS + 1 PC	LONG BOLT (M6*40MM)
G		4 PCS + 1 PC	SHORT BOLT (M6*25MM)
H		10 PCS + 1 PC	SMALL FLAT WASHER (M6)
I		8 PCS + 1 PC	LARGE FLAT WASHER (M8)
J		4 PCS + 1 PC	LOCK WASHER
K		2 PCS + 1 PC	PLATE
L		4 PCS + 1 PC	HEX BOLT (M8*35MM)
M		4 PCS + 1 PC	NUT
N		2 PCS	WRENCH
O		1 PC	ALLEN WRENCH
P		1 PC	CUSHION

ASSEMBLY INSTRUCTIONS (CONTINUED)

 
STYLE #: 71SRRWK43

STEP 1

A. PLACE RIGHT ARM (B) ON A FLAT, PROTECTED SURFACE.

B. ATTACH BACK (D) TO RIGHT ARM (B) WITH LONG BOLTS (F) AND SMALL FLAT WASHERS (H) USING ALLEN WRENCH (O). DO NOT TIGHTEN COMPLETELY.

C. ATTACH LEFT ARM (A) TO BACK (D) WITH LONG BOLTS (F) AND SMALL FLAT WASHERS (H) USING ALLEN WRENCH (O). DO NOT TIGHTEN COMPLETELY.

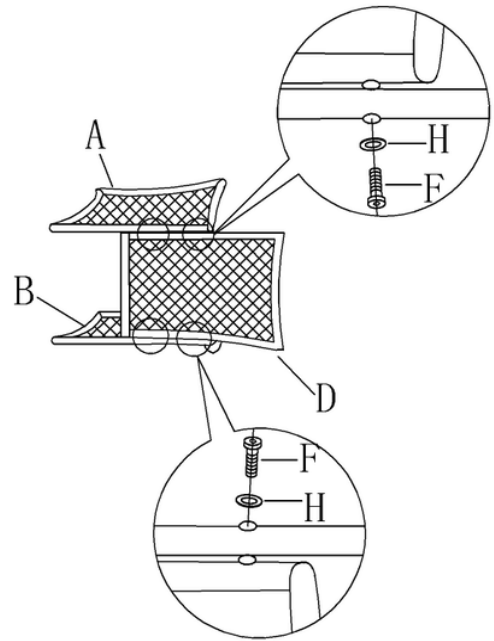


STEP 2

A. ROTATE PREASSEMBLED UNIT UPSIDE DOWN.

B. CONNECT SEAT (C) TO BACK (D) WITH LONG BOLTS (F) AND SMALL FLAT WASHERS (H) USING ALLEN WRENCH (O). DO NOT TIGHTEN COMPLETELY.

C. CONNECT SEAT (C) TO LEFT ARM (A) AND RIGHT ARM (B) WITH SHORT BOLTS (G) AND SMALL FLAT WASHERS (H) USING ALLEN WRENCH (O). DO NOT TIGHTEN COMPLETELY.

 D. TIGHTEN COMPLETELY ALL BOLTS (F & G) FROM STEPS 1 & 2 USING ALLEN WRENCH (O).

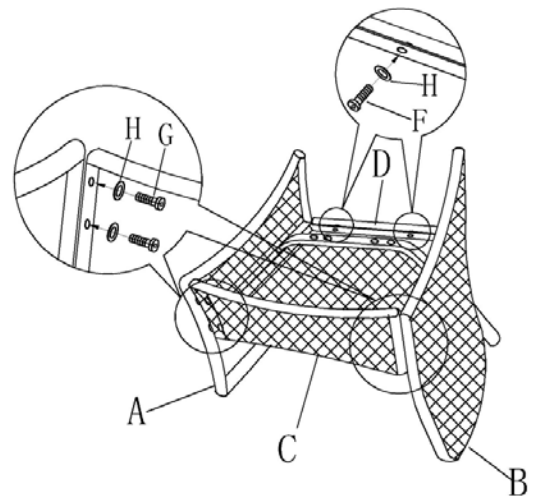


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 71SRRWK43

STEP 3

 A. CONNECT BASE (E) TO PREASSEMBLED UNIT WITH HEX BOLTS (L), LOCK WASHERS (J), LARGE FLAT WASHERS (I), PLATES (K), AND NUTS (M) USING WRENCHES (N). TIGHTEN COMPLETELY.

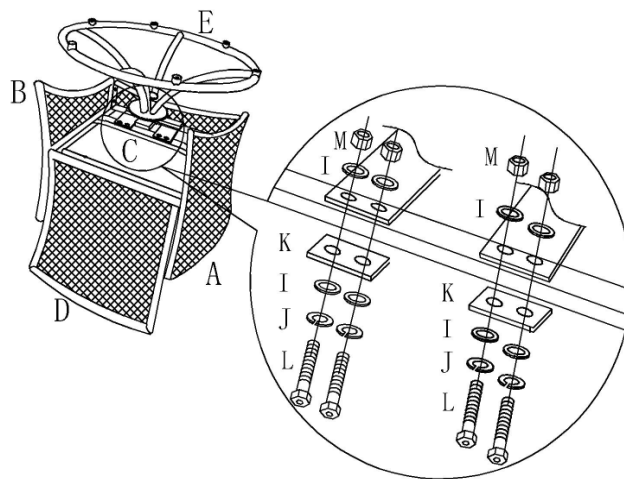


STEP 4

A. ROTATE ASSEMBLED UNIT TO THE STANDING POSITION.

B. PLACE CUSHION (P) ON SEAT (C).

 C. ASSEMBLY IS COMPLETE.

 
 
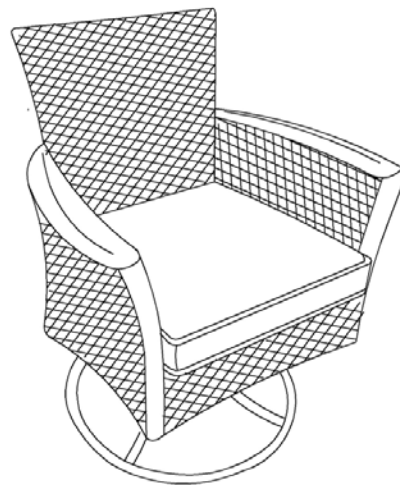 

 




SAVE THESE INSTRUCTIONS

SONOMA BISCAI TABLE ASSEMBLY INSTRUCTIONS

STYLE #: 71SRRWK43

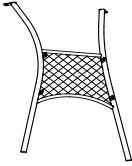ASSEMBLE ON A FLAT, PROTECTED SURFACE.

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	TOP FRAME
B		2 PCS	LEG
C		2 PCS	LEG CONNECTOR
D		1 PC	GLASS TOP
E		12 PCS + 1 PC	BOLT (M6*15MM)
F		12 PCS + 1 PC	FLAT WASHER
G		1 PC	ALLEN WRENCH

 
ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 71SRRWK43

STEP 1

A. PLACE TOP FRAME (A) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.


B. ATTACH LEGS (B) TO TOP FRAME (A) WITH BOLTS (E) AND FLAT WASHERS (F) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

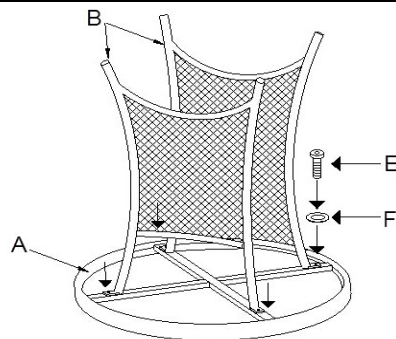

STEP 2

A. ATTACH LEG CONNECTERS (C) TO LEGS (B) WITH BOLTS (E) AND FLAT WASHERS (F) USING ALLEN WRENCH (G). DO NOT TIGHTEN COMPLETELY.

 B. TIGHTEN COMPLETELY ALL BOLTS (E) WITH ALLEN WRENCH (G).

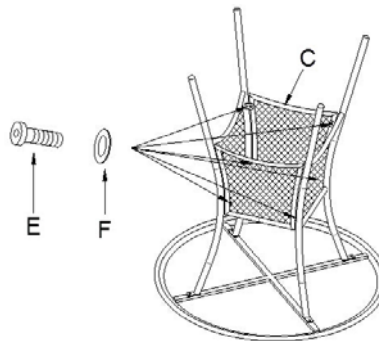


STEP 3

A. ROTATE ASSEMBLED UNIT TO THE UPRIGHT POSITION.

B. PLACE GLASS TOP (D) ON TOP FRAME (A).

C. ADJUST LEVELERS ON BOTTOM SO THE TABLE IS STABLE ON THE FLOOR.

 D. ASSEMBLY IS COMPLETE.

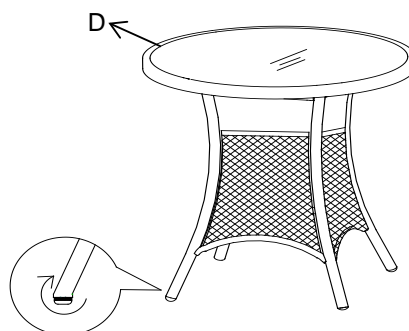

**** WE RECOMMEND THAT YOU SAVE THE ALLEN WRENCH & WRENCH AND PERIODICALLY TIGHTEN ALL BOLTS.**

WEIGHT LIMIT

CHAIR: 300 LBS; TABLE: 50 LBS

CARE AND CLEANING

FRAME: WIPE CLEAN WITH A SOFT, DAMP CLOTH AS NEEDED.

CUSHION: SPOT CLEAN WITH A DAMP, CLEAN CLOTH AS NEEDED.

DO NOT STAND OR CLIMB ON THE CHAIR.

DO NOT SIT, STAND, OR CLIMB ON THE TABLE.

WARRANTY

1 YEAR LIMITED WARRANTY. COMMERCIAL USE, ACTS OF NATURE, FIRE, FREEZING, ABUSIVE USE, DISCOLORATION OR FADING OF THE FINISH OR FABRICS AS RESULT OF CHEMICALS OR SPILLS IS NOT COVERED. PROOF OF PURCHASE (DATED RECEIPT) IS REQUIRED FOR WARRANTY CLAIMS. WE RESERVE THE RIGHT TO MAKE SUBSTITUTIONS WITH SIMILAR MERCHANDISE.