



- 3** Close the zippered closure on the bottom of the Chair Body (C).

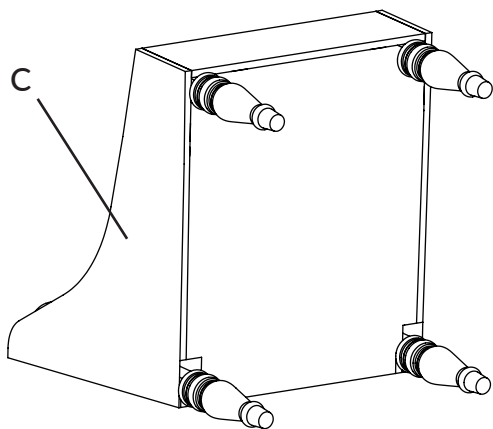


- 4** Enjoy your new Accent Chair.  
You can re-tighten Step 2 periodically if the chair becomes loose.

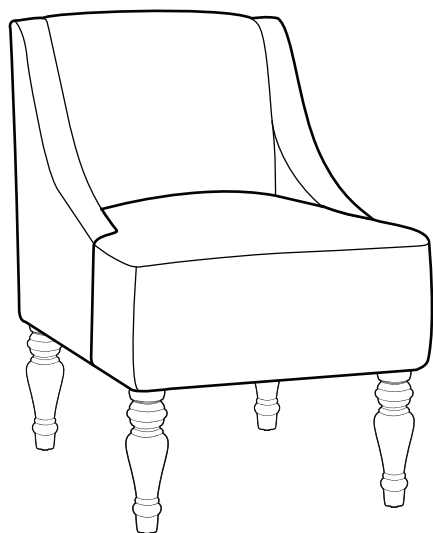

# dh

Model: \_\_\_\_\_  
Lot No: \_\_\_\_\_  
Date of Purchase: \_\_\_\_\_

## CHARLOTTE

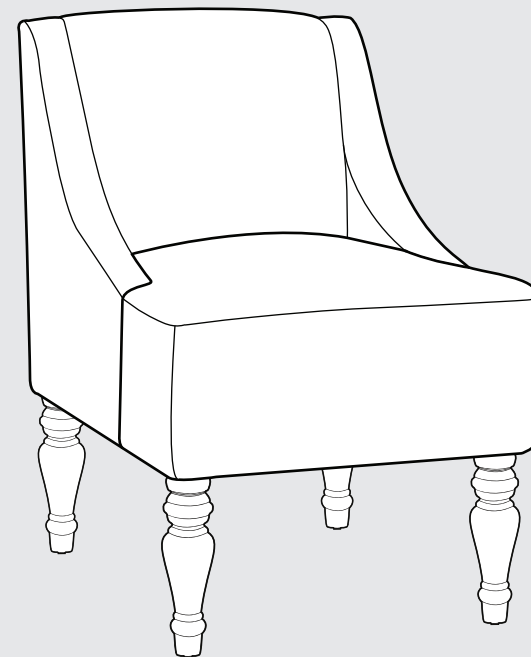

### ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.

Customer Service

**1-877-864-5752**

8:30 AM PST - 4:00 PM PST (Monday-Friday)

Website: [www.dwellhom.com](http://www.dwellhom.com)

Missing Parts: [parts@dwellhom.com](mailto:parts@dwellhom.com)

Warranty Information: [www.dwellhom.com/warranty](http://www.dwellhom.com/warranty)



VN

**WARNING:** This product may contain small components, please ensure they are kept away from small children.

## PARTS AND HARDWARE


Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.




A. Front Legs  
2x



B. Rear Legs  
2x

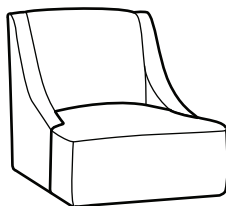

 
C. Chair Body  
1x



D. 5/16x60mm Bolt  
8x



 E. Washer  
8x



F. Lock Washer  
8x




G. Allen Key  
1x

## ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Turn the Chair over to reveal the bottom of the Chair Body (C).

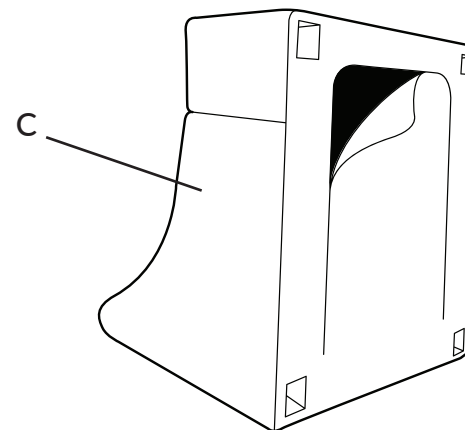

- 2 Attach Front Legs (A) and Rear Legs (B) to Chair Body (C) using Bolt (D), Washer (E) and Lock Washer (F). Tighten using the provided Allen Key (G).

