


 









SAVE THESE INSTRUCTIONS

SET OF 2 BISCAIY HIGH DINING CHAIRS

  STYLE #: 61SRR4501BIS

ASSEMBLE ON A FLAT, PROTECTED SURFACE


PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	LEFT SIDE
B		1 PC	RIGHT SIDE
C		1 PC	SEAT
D		1 PC	BACK
E		1 PC	FRONT STRETCHER
F		1 PC	BACK STRETCHER
G		6 + 1 PCS	LONG BOLT M6*40
H		2 + 1 PCS	MEDIUM BOLT M6*30
I		8 + 1 PCS	SHORT BOLT M6*20
J		16 + 1 PCS	WASHER
K		1 PC	ALLEN WRENCH

STYLE #: 61SRR4501BIS

ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 1

A. ATTACH BACK (D) TO LEFT SIDE (A) AND RIGHT SIDE (B) WITH LONG BOLT (G) AND WASHER (J) USING ALLEN WRENCH (K). LOOSELY TIGHTEN.

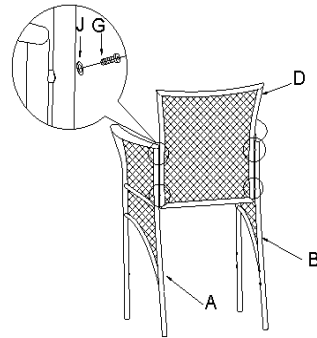


STEP 2

A. TURN ASSEMBLY UPSIDE DOWN.


B. ATTACH SEAT (C) TO BACK (D) WITH LONG BOLT (G) AND WASHER (J) USING ALLEN WRENCH (K). LOOSELY TIGHTEN.

C. SECURE SEAT (C) TO LEFT SIDE (A) AND RIGHT SIDE (B) WITH MEDIUM BOLT (H) AND WASHER (J) USING ALLEN WRENCH (K). LOOSELY TIGHTEN.

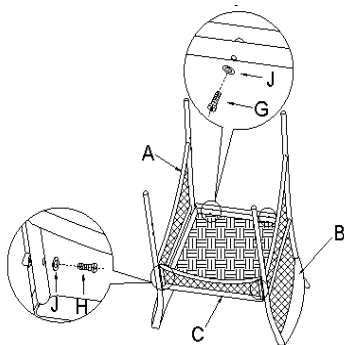

STEP 3


A. INSERT FRONT STRETCHER BAR (E) AND BACK STRETCHER BAR (F) BETWEEN LEFT SIDE (A) AND RIGHT SIDE (B) WITH SHORT BOLT (I) AND WASHER (J) USING ALLEN WRENCH (K).

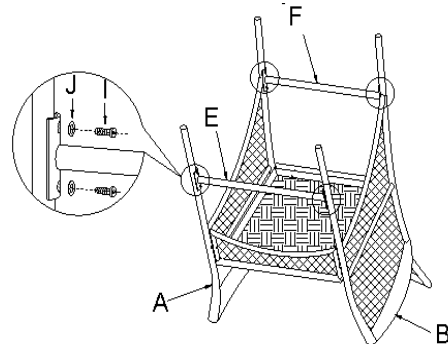

STEP 4

A. FULLY TIGHTEN ALL BOLTS USING ALLEN WRENCH (K).

B. TURN CHAIR TO UPRIGHT POSITION.

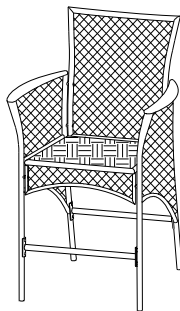

CARE AND CLEANING

WIPE CLEAN WITH A SOFT, DAMP CLOTH AS NEEDED.

WEIGHT LIMIT

HIGH DINING CHAIR: 300 LBS

WARRANTY

1 YEAR LIMITED WARRANTY. COMMERCIAL USE, ACTS OF NATURE, FIRE, FREEZING, ABUSIVE USE, DISCOLORATION OR FADING OF THE FINISH OR FABRICS AS RESULT OF CHEMICALS OR SPILLS IS NOT COVERED. PROOF OF PURCHASE (DATED RECEIPT) IS REQUIRED FOR WARRANTY CLAIMS. WE RESERVE THE RIGHT TO MAKE SUBSTITUTIONS WITH SIMILAR MERCHANDISE.