 

 
 

 




SAVE THESE INSTRUCTIONS

BISCAY HIGH DINING TABLE

STYLE #: 61SRR4502BIS


ASSEMBLE ON A FLAT, PROTECTED SURFACE

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	TOP FRAME
B		2 PCS	LEG
C		2 PCS	LEG CONNECTER
D		1 PC	SHELF
E		1 PC	GLASS TOP
F		16 PCS+ 1 PCS	BOLT M6*15
G		16 PCS + 1 PCS	WASHER
H		1 PC	ALLEN WRENCH

STYLE #: 61SRR4502BIS
ASSEMBLY INSTRUCTIONS (CONTINUED)


STEP 1

A. ATTACH LEG (B) TO TOP FRAME (A) WITH BOLT (F) AND WASHER (G) USING ALLEN WRENCH (H). LOOSELY TIGHTEN.

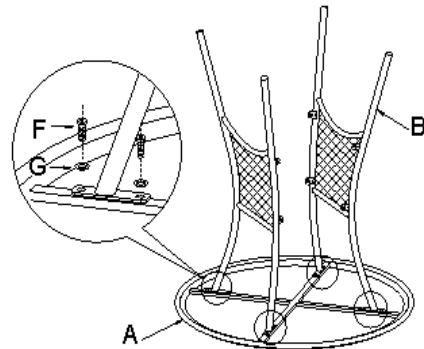


STEP 2

A. INSERT LEG CONNECTERS (C) BETWEEN LEGS (B) AND CONNECT WITH BOLT (F) AND WASHER (G) USING ALLEN WRENCH (H).
B. FULLY TIGHTEN ALL BOLTS WITH ALLEN WRENCH (H).

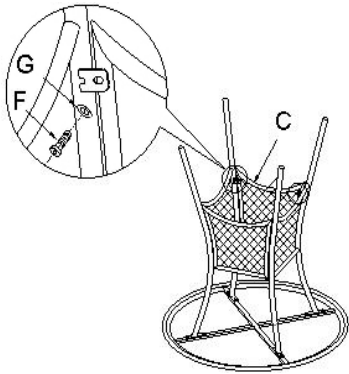

STEP 3

A. TURN ASSEMBLED UNIT RIGHT SIDE UP.
B. INSTALL GLASS TOP (E) ONTO TOP FRAME (A).
C. INSTALL SHELF (D) ONTO TOP OF LEG CONNECTERS (C).
D. FOUR ADJUSTABLE FOOT CAPS TO BALANCE THE TABLE.

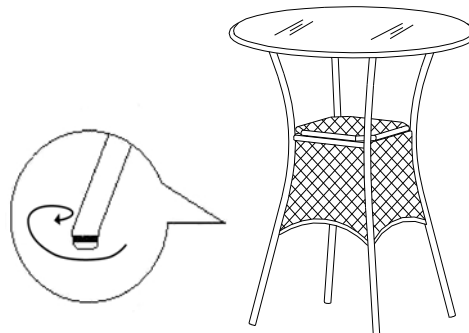

CARE AND CLEANING

WIPE CLEAN WITH A SOFT, DAMP CLOTH AS NEEDED

WEIGHT LIMIT

HIGH DINING TABLE: 50 LBS

WARRANTY

1 YEAR LIMITED WARRANTY. COMMERCIAL USE, ACTS OF NATURE, FIRE, FREEZING, ABUSIVE USE, DISCOLORATION OR FADING OF THE FINISH OR FABRICS AS RESULT OF CHEMICALS OR SPILLS IS NOT COVERED. PROOF OF PURCHASE (DATED RECEIPT) IS REQUIRED FOR WARRANTY CLAIMS. WE RESERVE THE RIGHT TO MAKE SUBSTITUTIONS WITH SIMILAR MERCHANDISE.