

SAVE THESE INSTRUCTIONS
SONOMA CORONADO SWING ASSEMBLY INSTRUCTIONS
STYLE #: 61SRR5801COR
USE 2 PEOPLE FOR ASSEMBLY.
ASSEMBLE ON A FLAT, PROTECTED SURFACE

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	TOP FRAME BAR
B		2 PCS	FRONT LEG
C		2 PCS	BACK LEG
D		1 PC	BACK CROSSBAR
E		2 PCS	LEG CROSSBAR
F		1 PC	MIDDLE LEG CROSSBAR
G		2 PCS	ARM
H		1 PC	BACK
I		1 PC	SEAT
J		2 PCS	LONG HANGING BAR
K		2 PCS	SHORT HANGING BAR
L		1 PC	CANOPY SIDE BAR WITH SWITCH
M		1 PC	CANOPY SIDE BAR
N		2 PCS	CANOPY SIDE SUPPORT CROSSBAR
O		1 PC	CANOPY CENTER SUPPORT CROSSBAR
P		1 PC	CANOPY BACK SUPPORT CROSSBAR
Q		1 PC	CANOPY FRONT SUPPORT CROSSBAR
R		1 PC	CANOPY COVER WITH SOLAR RECEIVER

ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: STYLE #: 61SRR5801COR

PART LIST	FIGURE	QUANTITY	DESCRIPTION
AA		4 PCS + 1 PC	BOLT (M6*28MM)
BB		2 PCS + 1 PC	BOLT (M5*30MM)
CC		2 PCS + 1 PC	BOLT (M6*30MM)
DD		6 PCS + 1 PC	BOLT (M6*35MM)
EE		2 PCS + 1 PC	BOLT (M6*50MM)
FF		2 PCS + 1 PC	BOLT (M6*55MM)
GG		2 PCS + 1 PC	BOLT (M6*65MM)
HH		4 PCS + 1 PC	BOLT (M6*75MM)
II		2 PCS + 1 PC	BOLT (M6*80MM)
JJ		4 PCS + 1 PC	BOLT (M8*55MM)
KK		4 PCS + 1 PC	BOLT (M8*95MM)
LL		14 PCS + 1 PC	SMALL NUT (M6)
MM		4 PCS + 1 PC	LARGE NUT (M8)
NN		24 PCS + 1 PC	SMALL FLAT WASHER (M6)
OO		12 PCS + 1 PC	LARGE FLAT WASHER (M8)
PP		4 PCS	FOOT CAP
QQ		2 PCS + 1 PC	SHORT PLASTIC WASHER
RR		6 PCS + 1 PC	LONG PLASTIC WASHER
SS		4 PCS + 1 PC	NUT CAP
TT		2 PCS	KNOB
UU		2 PCS	SPRING HOOK
VV		1 PC	ALLEN WRENCH
WW		1 PC	WRENCH


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR5801COR

STEP 1

A. WORKING WITH TWO PEOPLE: HOLD TOP FRAME BAR (A) TO CONNECT TO THE FRONT LEGS (B) AND BACK LEGS (C) WITH BOLTS (KK) INSERTED FROM FRONT TO BACK, LARGE FLAT WASHERS (OO), AND LARGE NUT (MM) USING ALLEN WRENCH (VV) AND WRENCH (WW). DO NOT TIGHTEN COMPLETELY.


B. ATTACH FEET (PP) TO BOTTOM OF FRONT LEGS (B) AND BACK LEGS (C).

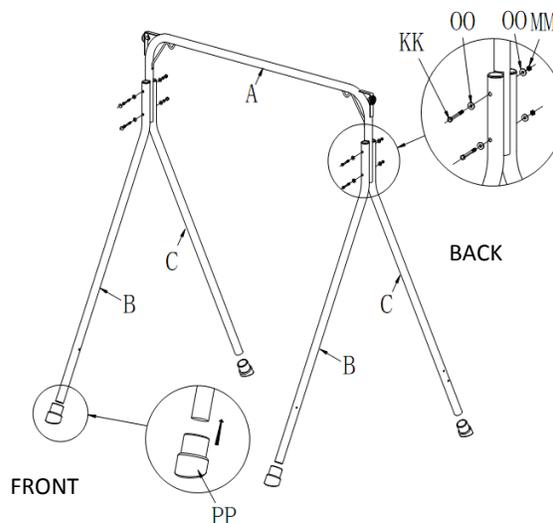

STEP 2

A. CONNECT THE BOTTOM HOLES OF BACK CROSSBAR (D) TO BACK LEGS (C) WITH BOLTS (HH) INSERTED FROM OUTSIDE TO INSIDE, SMALL WASHERS (NN), AND SMALL NUTS (LL) USING ALLEN WRENCH (VV) AND WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

B. CONNECT THE TOP HOLES OF BACK CROSSBAR (D) TO BACK LEGS (C) WITH BOLTS (HH) INSERTED FROM OUTSIDE TO INSIDE, SMALL WASHERS (NN), LEG CROSSBARS (E) ON OUTSIDE OF LEGS, AND SMALL NUTS (LL) USING ALLEN WRENCH (VV) AND WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

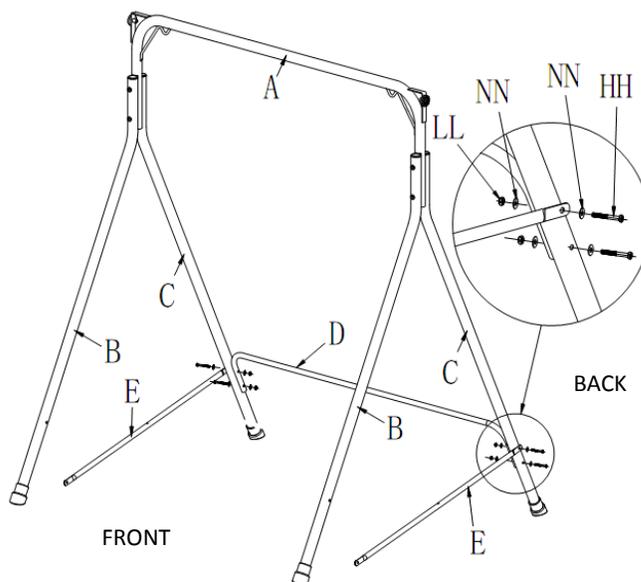


STEP 3

A. CONNECT LEG CROSSBARS (E) TO FRONT LEGS (B) ON OUTSIDE OF LEGS WITH BOLTS (EE) INSERTED FROM OUTSIDE TO INSIDE, SMALL FLAT WASHERS (NN), AND SMALL NUTS (LL) USING ALLEN WRENCH (VV) AND WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

B. CONNECT MIDDLE LEG CROSSBAR (F) TO LEG CROSSBARS (E) WITH BOLTS (CC) INSERTED FROM TOP TO BOTTOM, SMALL FLAT WASHERS (NN), AND SMALL NUTS (LL) USING ALLEN WRENCH (VV) AND WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

C. ENSURE THE FRAME SITS STABLE ON THE GROUND THEN TIGHTEN COMPLETELY ALL BOLTS FROM STEPS 1-4

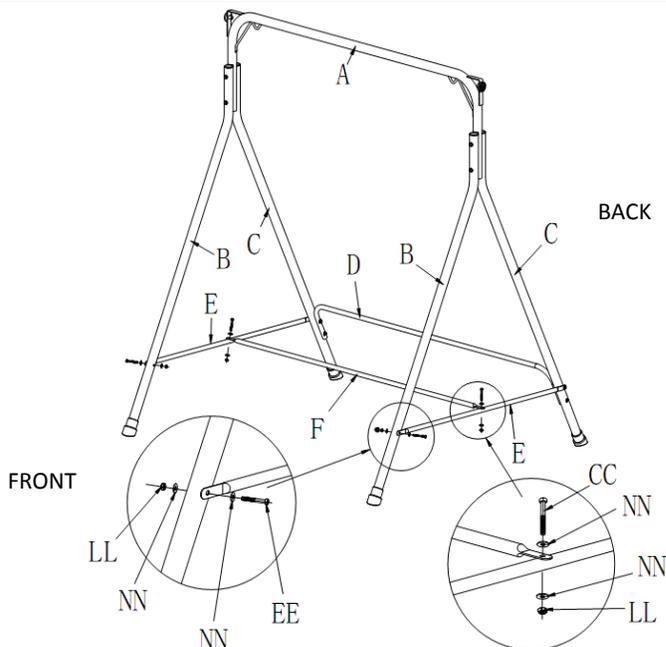


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR5801COR


STEP 4

A. ATTACH ARMS (G) TO SEAT (I) WITH BOLTS (JJ) INSERTED FROM OUTSIDE TO INSIDE, LARGE FLAT WASHERS (OO), AND LONG PLASTIC WASHERS (RR) USING ALLEN WRENCH (VV). DO NOT TIGHTEN COMPLETELY.

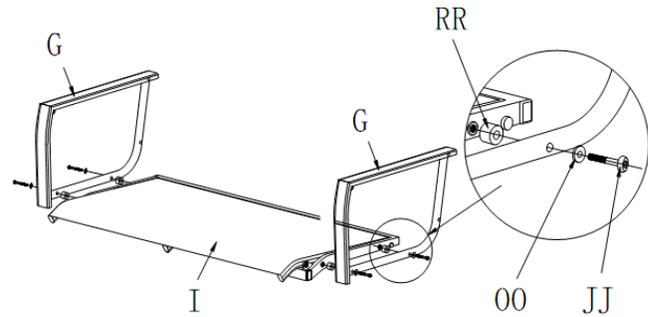

STEP 5


A. CONNECT ARMS (G) TO LOWER BACK (H) WITH BOLTS (GG) INSERTED FROM OUTSIDE TO INSIDE, SMALL FLAT WASHERS (NN), LONG PLASTIC WASHERS (RR), AND SMALL NUTS (LL) USING ALLEN WRENCH (VV) AND WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

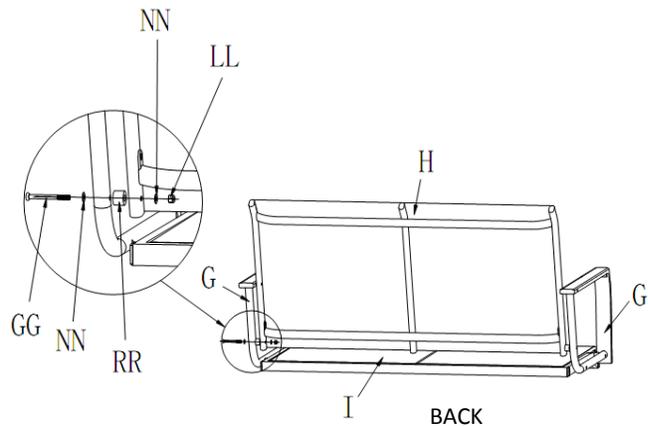

STEP 6

A. CONNECT ARMS (G) TO UPPER BACK (H) WITH BOLTS (II) INSERTED FROM OUTSIDE TO INSIDE, SMALL FLAT WASHERS (NN), LONG HANGING BARS (J), AND SMALL NUTS (LL) USING ALLEN WRENCH (VV) AND WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

B. CONNECT SHORT HANGING BARS (K) TO FRONT OF ARMS (G) WITH BOLTS (FF) INSERTING FROM INSIDE TO OUTSIDE, SHORT PLASTIC WASHERS (QQ), SMALL FLAT WASHERS (NN), AND SMALL NUTS (LL) USING ALLEN WRENCH (VV) AND WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

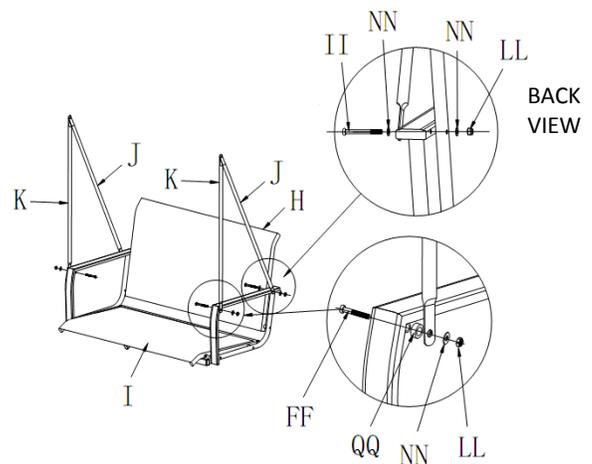


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR5801COR

STEP 7


A. INSERT 1 END OF SPRING HOOKS (UU) THROUGH BOTH HANGING BARS (J & K) KEEPING LONG HANGING BARS (J) TO THE OUTSIDE.

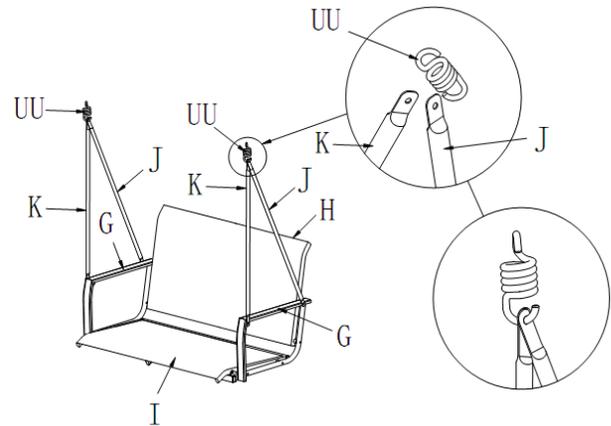

STEP 8

A. HANG SPRING HOOKS (UU) FROM TOP FRAME BAR (A) WITH SEAT FACING FRONT LEGS (B).

B. TIGHTEN COMPLETELY ALL BOLTS FROM STEPS 5-8

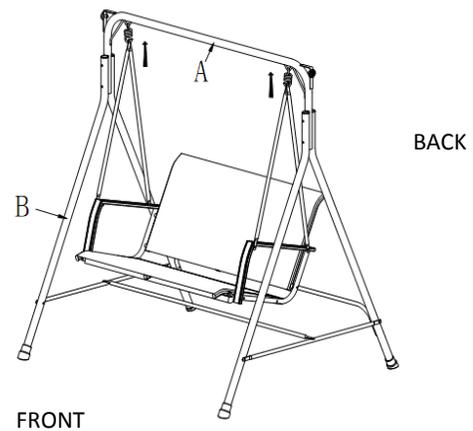


STEP 9

A. CONNECT CANOPY CENTER SUPPORT CROSSBAR (O) TO CANOPY SIDE BAR WITH SWITCH (L) AND CANOPY SIDE BAR (M) WITH BOLT (DD) USING ALLEN WRENCH (VV). DO NOT TIGHTEN COMPLETELY.

B. CONNECT CANOPY FRONT SUPPORT CROSSBAR (Q) WITH PLUG END ALIGNED WITH SWITCH ON CANOPY SIDE BAR WITH SWITCH (L) WITH BOLT (AA) INSERTED FROM INSIDE TO OUTSIDE, AND NUT CAP (SS) USING WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

C. CONNECT REMAINING END OF CANOPY FRONT SUPPORT CROSSBAR (Q) TO CANOPY SIDE BAR (M) WITH BOLT (AA) INSERTED FROM INSIDE TO OUTSIDE, AND NUT CAP (SS) USING WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

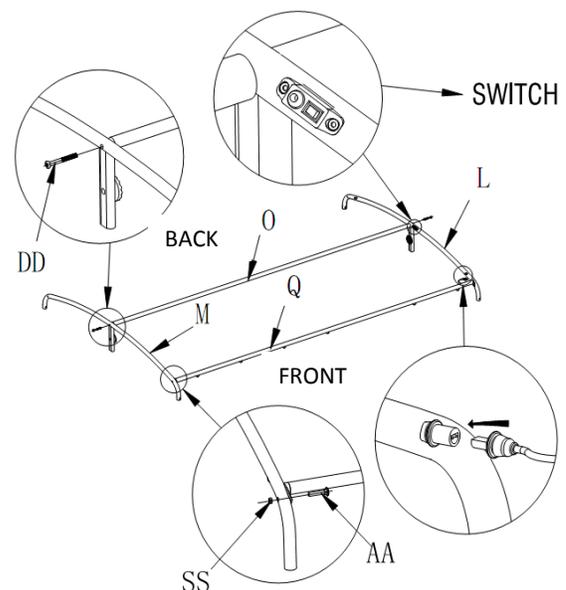

ASSEMBLY INSTRUCTIONS (CONTINUED)


STYLE #: 61SRR5801COR

STEP 10

A. CONNECT CANOPY BACK SUPPORT CROSSBAR (P) WITH PLUG END ALIGNED WITH SWITCH ON CANOPY SIDE BAR WITH SWITCH (L) WITH BOLT (AA) INSERT BOLT FROM INSIDE TO OUTSIDE, AND NUT CAP (SS) USING WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

B. CONNECT REMAINING END OF CANOPY BACK SUPPORT CROSSBAR (P) TO CANOPY SIDE BAR (M) WITH BOLT (AA) INSERT BOLT FROM INSIDE TO OUTSIDE, AND NUT CAP (SS) USING WRENCH (WW). DO NOT TIGHTEN COMPLETELY.

C. TIGHTEN ALL BOLTS FROM STEPS 10 & 11.

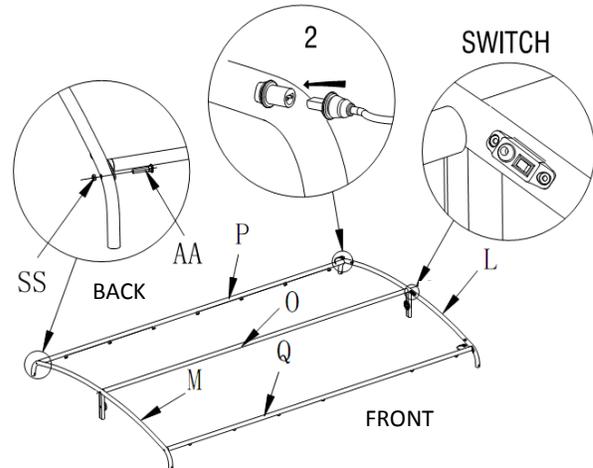


STEP 11

A. INSERT CANOPY SIDE SUPPORT CROSSBARS (N) INTO THE SHORT POCKETS AT THE ENDS OF THE CANOPY COVER WITH SOLAR RECEIVER (R).

B. WITH SOLAR END OF CANOPY COVER (R), CONNECT CENTER OF CANOPY SIDE SUPPORT CROSSBAR (N) TO CANOPY SIDE BAR WITH SWITCH (L) WITH BOLT (BB) USING ALLEN WRENCH (VV). DO NOT TIGHTEN COMPLETELY.

C. PLUG THE SOLAR RECEIVER CORD INTO SWITCH ON CANOPY SIDE BAR WITH SWITCH (L).

D. CONNECT THE ENDS OF CANOPY SIDE SUPPORT CROSSBAR (N) TO CANOPY SIDE BAR WITH SWITCH (L) WITH BOLTS (DD) USING ALLEN WRENCH (VV). DO NOT TIGHTEN COMPLETELY.

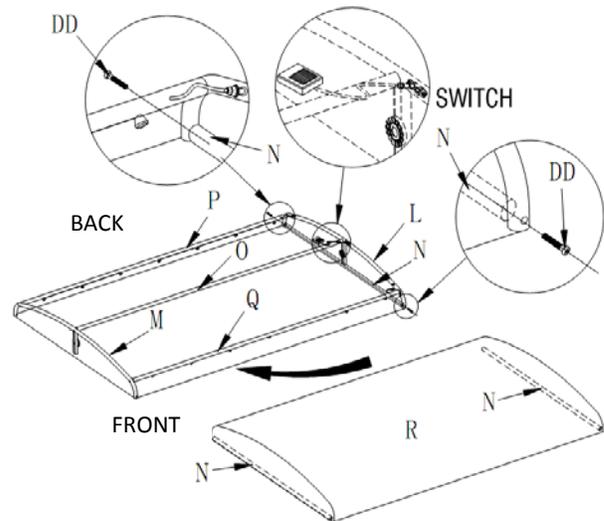


STEP 12

A. PULL THE CANOPY COVER (R) OVER THE ASSEMBLED CANOPY FRAME ALL THE WAY TO THE OPPOSITE END. STRETCH CANOPY COVER (R) WITH SIDE SUPPORT CROSSBAR (N) TO THE BOTTOM OF CANOPY SIDE BAR (M) TO FULLY EXTEND FABRIC.

B. ALIGN CENTER HOLE OF CANOPY SIDE SUPPORT CROSSBAR (N) WITH CENTER OF CANOPY SIDE BAR (M) AND CONNECT WITH BOLT (BB) USING ALLEN WRENCH (VV). DO NOT TIGHTEN COMPLETELY.

C. CONNECT THE ENDS OF CANOPY SIDE SUPPORT CROSSBAR (N) TO CANOPY SIDE BAR (M) WITH BOLTS (DD) USING ALLEN WRENCH (VV). DO NOT TIGHTEN COMPLETELY.

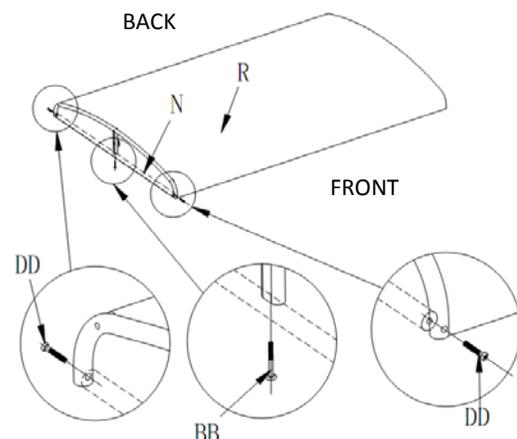


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR5801COR

STEP 13

- A. TIGHTEN COMPLETELY ALL BOLTS FROM STEPS 12 & 13.
- B. INSERT KNOBS (TT) THROUGH GROMMETS ON CANOPY INTO TOP FRAME BAR (A). TIGHTEN COMPLETELY.
- C. TURN THE LIGHTS ON AND OFF WITH THE SWITCH ON CANOPY SIDE BAR WITH SWITCH (L).
- D. ASSEMBLY IS COMPLETE.

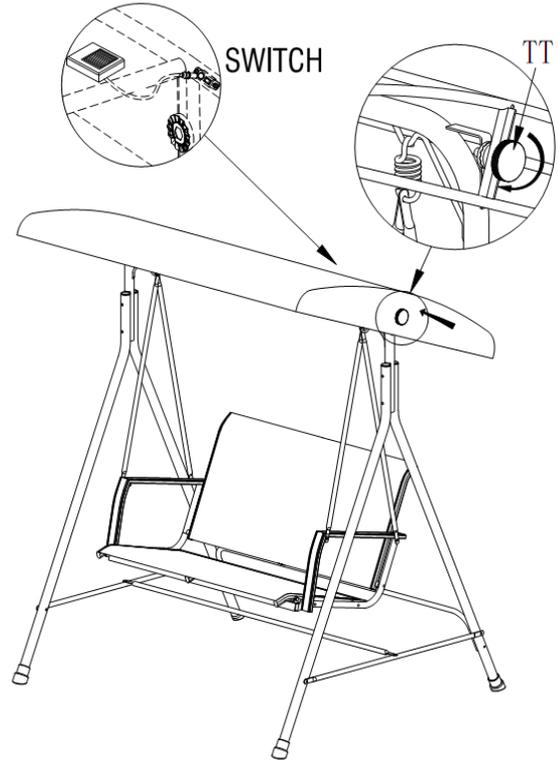

** WE RECOMMEND THAT YOU SAVE THE ALLEN WRENCH AND WRENCH AND PERIODICALLY TIGHTEN ALL BOLTS.

WEIGHT LIMIT

500 LBS

CARE AND CLEANING

FOR OUTDOOR USE ONLY

FRAME: WIPE CLEAN WITH A MILD SOAP AND WATER SOLUTION, RINSE WITH CLEAN WATER, AND DRY THOROUGHLY.

DO NOT SWING AGGRESSIVELY (I.E. TOO HIGH OR TOO FAST)

DO NOT STAND OR CLIMB ON SWING

IN ORDER TO PROLONG THE LIFE OF YOUR SWING, PLEASE STORE IN DRY SHELTERED PLACE WHEN NOT IN USE OR DURING INCLEMENT WEATHER.

WARRANTY

1 YEAR LIMITED WARRANTY FOR FRAME AND CUSHIONS.

CUSTOMER SERVICE: PLEASE NOTE - DO NOT RETURN THIS ITEM TO THE RETAILER.

CUSTOMER SERVICE HOT LINE: 1-866-905-4107

SERVICE HOURS: 11:30 A. M. to 8:00 P. M. EASTERN STANDARD TIME /8:30 A. M. to 5:00 P. M. PACIFIC STANDARD TIME

WEBSITE: WWW.YOTRIOINT.COM

TO ASSIST YOU BETTER, PLEASE GATHER THE FOLLOWING INFORMATION BEFORE CALLING CUSTOMER SERVICE: PRODUCT NAME AND STYLE NUMBER, DESCRIPTION AND OR IMAGES OF THE ISSUE, ORIGINAL STORE PURCHASE RECEIPT.