 
 


## SAVE THESE INSTRUCTIONS

### SONOMA MARKET UMBRELLA ASSEMBLY INSTRUCTIONS

STYLE #: 61SRR34MKT

 
ASSEMBLE ON A FLAT, PROTECTED SURFACE

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	UMBRELLA
B		1 PC	POLE

#### STEP 1

A. DEPRESS SPRING PIN ON UMBRELLA (A).

B. INSERT UMBRELLA (A) INTO POLE (B) UNTIL THE SPRING PIN SNAPS THROUGH POLE (B) TO SECURE.

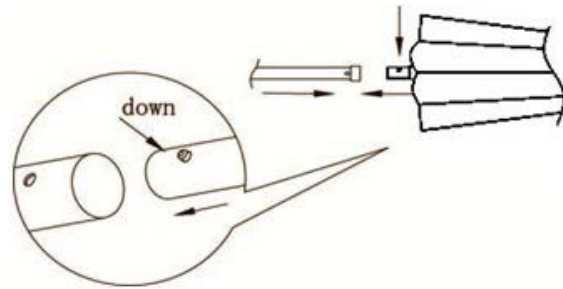


#### STEP 2

A. PLACE ASSEMBLED UMBRELLA INTO THE DESIRED LOCATION TO SECURE.

B. TO OPEN: SLIDE THE HANDLE UP THE POLE WHILE LIFTING AN UMBRELLA RIB OUT TO ASSIST WITH OPENING. CONTINUE TO SLIDE THE HANDLE UP UNTIL IT CLICKS INTO PLACE.

 C. TO CLOSE: PUSH BUTTON ON HANDLE AND PUSH UP AT THE SAME TIME. SLIDE THE HANDLE DOWN THE POLE.

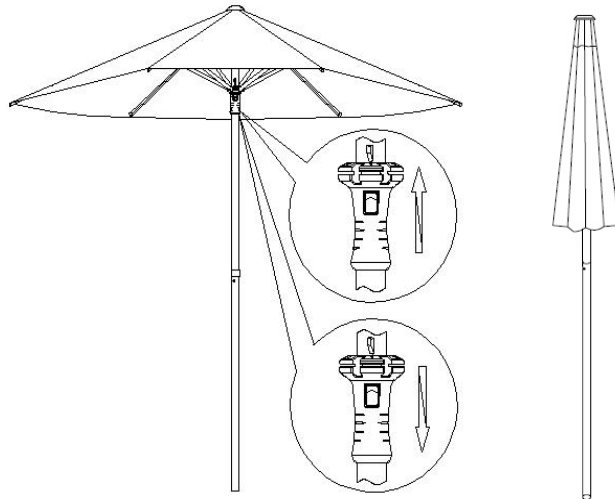

#### CARE AND CLEANING

WIPE CLEAN WITH A SOFT, DAMP CLOTH AS NEEDED.

PRODUCT CANNOT WITHSTAND HIGH WINDS. TO AVOID INJURY OR DAMAGE, DO NOT USE IN HIGH WIND CONDITIONS. LIGHT TO MODERATE WINDS MAY ALSO CAUSE PRODUCT TO SHIFT, USE CAUTION. ALWAYS RETRACT UMBRELLA WHEN NOT IN USE.

#### WARRANTY

1 YEAR LIMITED WARRANTY. COMMERCIAL USE, ACTS OF NATURE, FIRE, FREEZING, ABUSIVE USE, DISCOLORATION OR FADING OF THE FINISH OR FABRICS AS RESULT OF CHEMICALS OR SPILLS IS NOT COVERED. PROOF OF PURCHASE (DATED RECEIPT) IS REQUIRED FOR WARRANTY CLAIMS. WE RESERVE THE RIGHT TO MAKE SUBSTITUTIONS WITH SIMILAR MERCHANDISE.