# **SAVE THESE INSTRUCTIONS**

# **ODESSA HIGH DINING TABLE ASSEMBLY INSTRUCTIONS**

## **STYLE #: 61SRR2704**


# **ASSEMBLE ON A FLAT, PROTECTED SURFACE**

PART LIST	FIGURE	QUANTITY	DESCRIPTION
А		1 PC	TABLE RIM
В		2 PCS	END LEG WITH FEET LEVELER
С		2 PCS	SIDE LEG
D	//	1 PC	GLASS TABLE TOP
Е	(d))))))))))))))))))))))))))))))))))))	8 PCS	LONG BOLT (M6*40)
F		8 PCS	SHORT BOLT (M6*23)
G	0	8 PCS	FLAT WASHER
Н		1 PC	ALLEN WRENCH

### STEP 1

A. PLACE TABLE RIM (A) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.


B. CONNECT END LEGS (B) TO TABLE RIM (A) WITH LONG BOLT (E) USING ALLEN WRENCH (H). DO NOT TIGHTEN COMPLETELY.

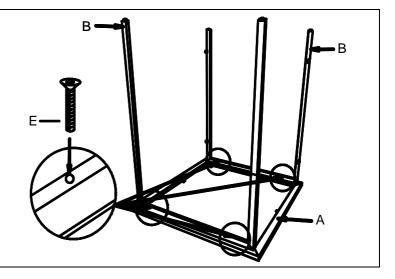

## **ODESSA HIGH DINING TABLE**

**STYLE #: 61SRR2704** 

## **ASSEMBLY INSTRUCTIONS (CONTINUED)**

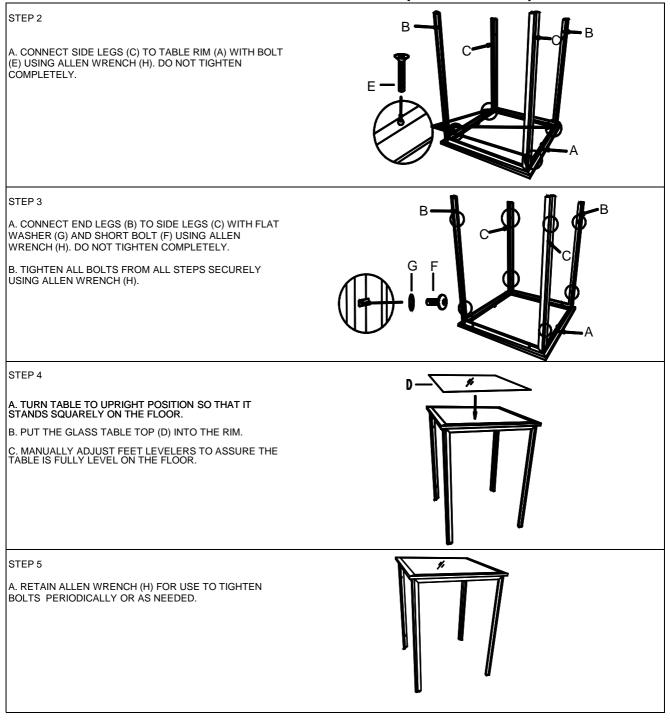

#### **WEIGHT LIMIT**

100 LBS

### **CARE AND CLEANING**

IN ORDER TO PROLONG THE LIFE OF YOUR TABLE, PLEASE STORE IN DRY SHELTERED PLACE WHEN NOT IN USE OR DURING INCLEMENT WEATHER.

CLEAN WITH A DAMP CLOTH OR SPONGE USING WARM WATER AND MILD SOAP, WIPE DRY.

#### WARRANTY

1 YEAR LIMITED WARRANTY FOR FRAME.

CUSTOMER SERVICE: PLEASE NOTE - DO NOT RETURN THIS ITEM TO THE RETAILER.

CUSTOMER SERVICE HOT LINE: 844-836-4055

SERVICE HOURS:8:30 A.M to 5:00 P.M CENTRAL TIME

E-MAIL: REMINGTON@DONGLINUSA.NET

TO ASSIST YOU BETTER, PLEASE GATHER THE FOLLOWING INFORMATION BEFORE CALLING CUSTOMER SERVICE: PRODUCT NAME AND STYLE NUMBER, DESCRIPTION AND/OR IMAGES OF THE ISSUE, ORIGINAL STORE PURCHASE RECEIPT.