SAVE THESE INSTRUCTIONS

SONOMA BRAMPTON WICKER CHAIR ASSEMBLY INSTRUCTIONS STYLE #: 71SRRWK05

ASSEMBLE ON A FLAT, PROTECTED SURFACE.

PART LIST	FIGURE	QUANTITY	DESCRIPTION
А		1 PC	RIGHT ARM
В		1 PC	LEFT ARM
С		1 PC	BACK
D		1 PC	SEAT
E		1 PC	BASE
F		4 PCS + 1 PC	SHORT BOLT (M6*25MM)
G		2 PCS + 1 PC	MEDIUM BOLT (M6*30MM)
Н		4 PCS + 1 PC	LONG BOLT (M6*45MM)
I	0	10 PCS + 1 PC	SMALL FLAT WASHER
J	0	2 PCS + 1 PC	PLASTIC WASHER
К		2 PCS + 1 PC	SHORT HEX BOLT (M8*34MM)
L		2 PCS + 1 PC	LONG HEX BOLT (M8*38MM)
М		4 PCS + 1 PC	LOCK WASHER
N		4 PCS + 1 PC	LARGE FLAT WASHER
0		2 PCS + 1 PC	PLATE


Р	4 PCS + 1 PC	NUT
Q	1 PC	ALLEN WRENCH
R	2 PCS	WRENCH
S	1 PC	SEAT CUSHION
Т	1 PC	BACK CUSHION

STEP 1

A. PLACE RIGHT ARM (A) ON A FLAT, PROTECTED SURFACE.

B. CONNECT THE BOTTOM OF RIGHT ARM (A) TO BACK (C) WITH SHORT BOLT (F) AND SMALL FLAT WASHER (I) USING ALLEN WRENCH (Q). DO NOT TIGHTEN COMPLETELY.


C. CONNECT THE TOP OF RIGHT ARM (A) TO BACK (C) WITH MEDIUM BOLT (G), SMALL FLAT WASHER (I), AND PLASTIC WASHER (J) USING ALLEN WRENCH (Q). DO NOT TIGHTEN COMPLETELY.

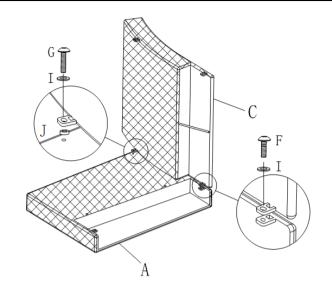

STEP 2

A. CONNECT BOTTOM OF SEAT (D) TO RIGHT ARM (A) WITH LONG BOLTS (H) AND SMALL FLAT WASHERS (I) USING ALLEN WRENCH (Q) AS SHOWN. DO NOT TIGHTEN COMPLETELY.

B. CONNECT FRONT OF SEAT (D) TO RIGHT ARM (A) WITH SHORT BOLT (F) AND SMALL FLAT WASHER (I) USING ALLEN WRENCH (Q). DO NOT TIGHTEN COMPLETELY.

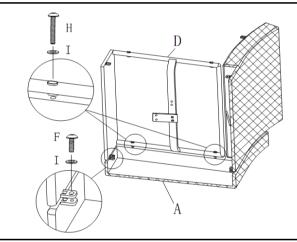


STEP 3

A. PLACE LEFT ARM (B) ON A FLAT, PROTECTED SURFACE. ROTATE ASSEMBLED UNIT ONTO LEFT ARM AS SHOWN.

B. CONNECT THE BOTTOM OF LEFT ARM (B) TO BACK (C) WITH SHORT BOLT (F) AND SMALL FLAT WASHER (I) USING ALLEN WRENCH (Q). DO NOT TIGHTEN COMPLETELY.

C. CONNECT THE TOP OF LEFT ARM (B) TO BACK (C) WITH MEDIUM BOLT (G), SMALL FLAT WASHER (I), AND PLASTIC WASHER (J) USING ALLEN WRENCH (Q). DO NOT TIGHTEN COMPLETELY.

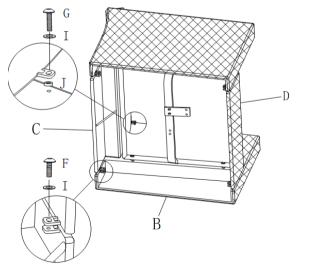


STEP 4

A. CONNECT BOTTOM OF SEAT (D) TO LEFT ARM (B) WITH LONG BOLTS (H) AND SMALL FLAT WASHERS (I) USING ALLEN WRENCH (Q) AS SHOWN. DO NOT TIGHTEN COMPLETELY.


B. CONNECT FRONT OF SEAT (D) TO LEFT ARM (B) WITH SHORT BOLT (F) AND SMALL FLAT WASHER (I) USING ALLEN WRENCH (Q). DO NOT TIGHTEN COMPLETELY.

C. TIGHTEN COMPLETELY ALL BOLTS FROM STEPS 1 - 4.

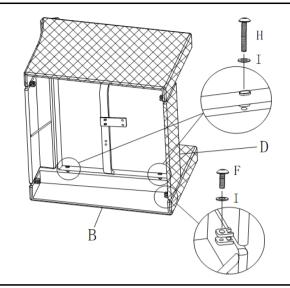

STFP 5

A. ROTATE CHAIR UPSIDE DOWN. CONNECT THE BASE (E) TO SEAT (D) WITH SHORT HEX BOLTS (K), LONG HEX BOLTS (L), PLATES (O), LARGE FLAT WASHERS (N), LOCK WASHERS (M), AND NUTS (P) USING WRENCHES (R) AS SHOWN. TIGHTEN COMPLETELY.

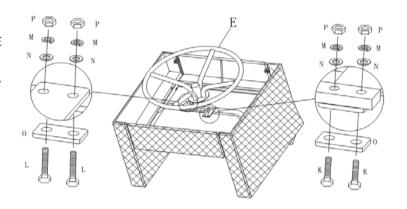


STEP 6

A. ROTATE CHAIR TO UPRIGHT POSITION.

B. PLACE SEAT CUSHION (S) ON SEAT (D). PLACE BACK CUSHION (T) ON BACK (C).

C. ASSEMBLY IS COMPLETE.

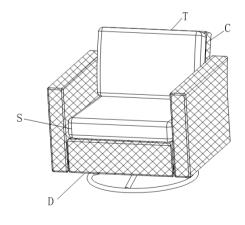

** WE RECOMMEND THAT YOU SAVE THE ALLEN WRENCH AND WRENCHES AND PERIODICALLY TIGHTEN ALL BOLTS.

WEIGHT LIMIT

250 LBS

CARE AND CLEANING

FRAME: WIPE CLEAN WITH A MILD SOAP AND WATER SOLUTION, RINSE WITH CLEAN WATER, AND DRY THOROUGHLY.

CUSHION: SPOT CLEAN WITH A SOFT CLOTH.

DO NOT STAND OR CLIMB ON CHAIR.

IN ORDER TO PROLONG THE LIFE OF YOUR CHAIR, PLEASE STORE IN DRY SHELTERED PLACE WHEN NOT IN USE OR DURING INCLEMENT WEATHER.

WARRANTY

1 YEAR LIMITED WARRANTY FOR FRAME.

CUSTOMER SERVICE: PLEASE NOTE - DO NOT RETURN THIS ITEM TO THE RETAILER.

CUSTOMER SERVICE HOT LINE: 1-866-905-4107

WEBSITE: WWW.YOTRIOINT.COM

TO ASSIST YOU BETTER, PLEASE GATHER THE FOLLOWING INFORMATION BEFORE CALLING CUSTOMER SERVICE: PRODUCT

NAME AND STYLE NUMBER, DESCRIPTION AND OR IMAGES OF THE ISSUE, ORIGINAL STORE PURCHASE RECEIPT.