











**SAVE THESE INSTRUCTIONS**  
**SONOMA 30" FIRE PIT ASSEMBLY INSTRUCTIONS**  
**STYLE #: 61SRR51**  
**ASSEMBLE ON A FLAT, PROTECTED SURFACE.**

**PHILLIPS HEAD SCREWDRIVER AND WRENCH NEEDED FOR ASSEMBLY; NOT INCLUDED.**


PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	HANDLE
B		1 PC	MESH COVER
C		1 PC	WOOD GRATE
D		1 PC	FIRE BOWL
E		1 PC	RING
F		4 PCS	LEGS
G		1 PC	POKER
H		1 PC + 1 PC	NUT
I		12 PCS + 1 PC	BOLT
J		12 PCS + 1 PC	FLAT WASHER

## ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR51

### STEP 1


A. INSERT HANDLE (A) INTO HOLE IN MESH COVER (B) AND SECURE IT WITH NUT (H) USING WRENCH, NOT INCLUDED. TIGHTEN COMPLETELY.

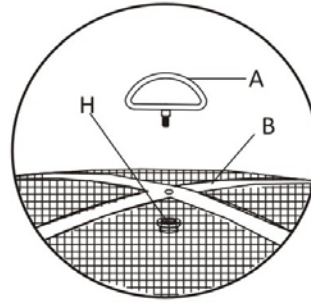

### STEP 2


A. PLACE FIRE BOWL (D) UPSIDE DOWN ON FLAT, PROTECTED SURFACE.

B. ATTACH LEGS (F) TO FIRE BOWL (D) WITH BOLTS (I) AND FLAT WASHERS (J) USING PHILLIPS HEAD SCREWDRIVER, NOT INCLUDED. TIGHTEN COMPLETELY.

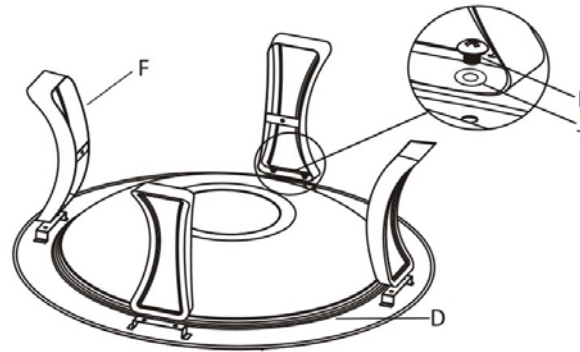

### STEP 3

A. ATTACH RING (E) TO LEGS (F) WITH BOLTS (I) AND FLAT WASHERS (J) USING PHILLIPS HEAD SCREWDRIVER, NOT INCLUDED. TIGHTEN COMPLETELY.

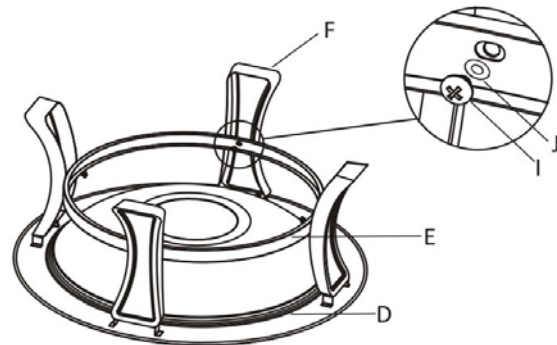


### STEP 4

A. ROTATE ASSEMBLED UNIT TO THE STANDING POSITION.

B. PLACE WOOD GRATE (C) INTO POSITION IN FIRE BOWL (D).

C. PLACE MESH COVER (B) ON TOP OF FIRE BOWL (D).

D. USE POKER (G) TO REMOVE AND REPLACE MESH COVER (B) WHEN IN USE TO PREVENT BURNING INJURY.

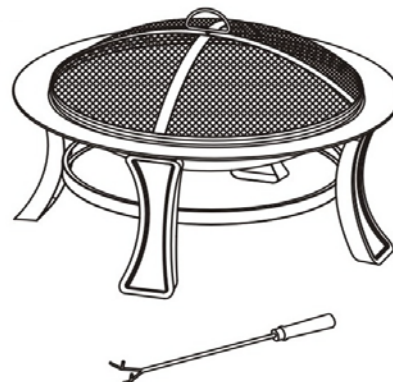

## ASSEMBLY INSTRUCTIONS (CONTINUED)

**STYLE #: 61SRR51**

**\*\*WE RECOMMEND THAT YOU PERIODICALLY TIGHTEN ALL BOLTS WITH PHILLIPS HEAD SCREWDRIVER AND BOLT WITH WRENCH, NOT INCLUDED.**

### **WEIGHT LIMIT**

50 LBS

### **CARE AND CLEANING**

1. TO AVOID METAL CORROSION OR DAMAGE, DO NOT USE WATER TO EXTINGUISH FLAMES.
2. FOR END OF SEASON STORAGE, EMPTY THE COLD ASHES FROM THE BASIN AND WIPE THE INNER AND OUTER SURFACES WITH WARM WATER AND MILD DETERGENT USING A NON-ABRASIVE SPONGE OR CLOTH. ALLOW TO DRY THOROUGHLY.
3. STORE CLEANED UNIT INSIDE A DRY LOCATION AT THE END OF SEASON.

### **WARRANTY**

1 YEAR LIMITED WARRANTY

FOR TECHNICAL ASSISTANCE ON ASSEMBLY OR REPLACEMENT PARTS, PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE. EMAIL YAYI TECH. AT CUSTOMERCARE@CHINA-YAYI.COM OR CALL AT 855-600-9294 FROM 9:00 AM TO 5:00 EST FOR ASSISTANCE.

### **WARNINGS**



**FOR OUTDOOR USE ONLY. FOLLOW ALL WARNINGS AND INSTRUCTIONS.**

1. CHECK LOCAL FIRE REGULATIONS BEFORE USING.
2. THE FIRE PIT IS HOT! DO NOT ALLOW CHILDREN TO PLAY NEAR IT WHEN FIRE PIT IS IN USE. ALWAYS KEEP CHILDREN & PETS AWAY FROM THIS PRODUCT.
3. DO NOT TOUCH THE SURFACE OF MESH COVER, WOOD GRATE, AND FIRE BOWL WITH BARE HANDS WHILE IN USE, AS IT MAY CAUSE BURNS. WHEN THE FIRE PIT IS IN USE, THE HANDLE ON THE MESH SCREEN CAN REACH EXTREME TEMPERATURES THAT WILL CAUSE INJURY TO AN UNPROTECTED HAND. PLEASE USE POKER OR AN APPROPRIATE HEAT RESISTANT GLOVE OR PAD WHEN HANDLING.
4. THE FIRE PIT IS INTENDED TO BURN WOOD LOGS ONLY. DO NOT OVERLOAD LOGS OR BURN COAL, LEAVES, OR OTHER COMBUSTIBLE MATERIALS IN FIRE PIT.
5. KEEP ALL COMBUSTIBLE ITEMS SUCH AS OUTDOOR FURNITURE, CLOTHING, PLANT, AND OTHER ITEMS AT LEAST 24" AWAY FROM THE FIRE PIT. NEVER USE THE FIRE PIT UNDER A COVERED TENT, GAZEBO, PATIO OR PORCH.
6. DO NOT USE IT ON WOODEN DECKS.
7. NEVER LEAVE BURING FIRE PIT UNATTENDED. ENSURE FIRE HAS BURNED OUT COMPLETELY AND PLACE THE MESH COVER ON IT BEFORE LEAVING. KEEP A FIRE EXTINGUISHER HANDY.
8. DO NOT USE THIS FIRE PIT AS A COOKING APPLIANCE. IT IS NOT DESIGNED TO BE USED TO GRILL FOOD.

### **CALIFORNIA PROPOSITION 65 WARNING**

9. THE BURNING OF NATURAL FIREWOOD, NATURAL GAS, MANUFACTURED FIREPLACE LOGS AND FIRE STARTERS CAN RESULT IN THE EMISSIONS OF CARBON MONOXIDE, SOOT AND OTHER COMBUSTION BY PRODUCTS. THE STATE OF CALIFORNIA RECOGNIZES THAT THESE BY-PRODUCTS MAY CAUSE CANCER, BIRTH DEFECTS, OR REPRODUCTIVE HARM.