 
SAVE THESE INSTRUCTIONS

SIMPLE BY DESIGN DISH CHAIR ASSEMBLY INSTRUCTIONS
STYLE #: 73SDRSE02SH,73SDRSE02SHW,73SDRSE02JS,73SDRSE02DN,
73SDRSE02FP,73SDRSE02PR,73SDRSE02PP,73SDRSE02PL,73SDRSE02VN
ASSEMBLE ON A FLAT,PROTESTED SURFACE.

STEP 1: TO OPEN


A. PLACE ON A FLAT, PROTECTED SURFACE.



STEP 2


A. STANDING AT THE FRONT OF THE CHAIR (LABELED UNDER SEAT), REACH FORWARD AND LIFT LEGS TOWARD YOU.

B. CONTINUE TO EXTEND CHAIR LEGS UNTIL THE SEAT IS FLAT AND CHAIR LEGS ARE LOCKED IN PLACE.

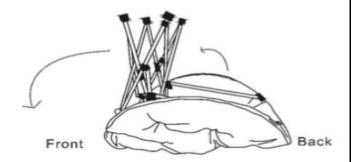

STEP 3


A. STEP TO THE BACK OF THE CHAIR AND LIFT FRAME WHILE MOVING CHAIR UP AND BACK INTO AN UPRIGHT POSITION.

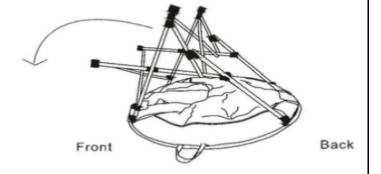

Back

STEP 4

A. THE CHAIR IS ASSEMBLED AND READY FOR USE.

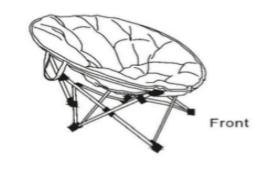


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 73SDRSE02SH,73SDRSE02SHW,73SDRSE02JS,73SDRSE02DN, 73SDRSE02FP,73SDRSE02PR,73SDRSE02PP,73SDRSE02PL,73SDRSE02VN

Front

STEP 5: TO CLOSE


A. LAY CHAIR FACE DOWN ON A FLAT, PROTECTED SURFACE.

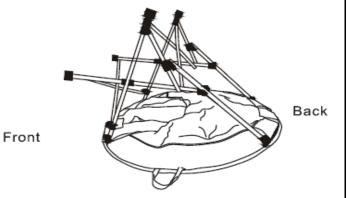

STEP 6


A. STANDING AT THE FRONT OF THE CHAIR (LABELED UNDER THE SEAT), PLACE YOUR FOOT GENTLY ON THE FRAME.

B. LIFT CHAIR LEGS UP WHILE PUSHING CHAIR LEGS FORWARD UNTIL LEGS ARE FOLDED AND COLLAPSED INTO CUSHION.

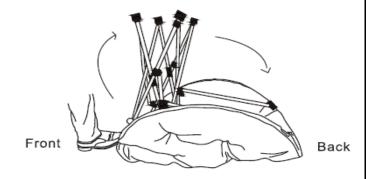

STEP 7

 A. CHAIR IS READY TO TRANSPORT OR STORE.



WEIGHT LIMIT

300 LBS

CARE AND CLEANING

FRAME: WIPE CLEAN WITH A SOFT, DAMP CLOTH AS NEEDED.
CUSHION: SPOT CLEAN WITH A SOFT, DAMP CLOTH AS NEEDED.
DO NOT STAND OR CLIMB ON THE CHAIR
INTENDED FOR INDOOR USE ONLY

WARRANTY

Contact our Customer Service Center at: 1-877-726-3888 or at customerservice@sinomax-usa.com