

SAVE THESE INSTRUCTIONS

SONOMA 10.5 FT CANTILEVER UMBRELLA ASSEMBLY INSTRUCTIONS

STYLE #: 61SRR33CL

ASSEMBLE ON A FLAT, PROTECTED SURFACE.


PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	LOWER BRACKET
B		1 PC	UPPER BRACKET
C		1 PC	BASE POLE
D		4 PCS	CORNER CONNECTOR
E		2 PCS	SIDE PANEL WITH LOCKS
F		2 PCS	SIDE PANEL
G		2 PCS	SUPPORT TUBE RIM
H		1 PC (IN 2 SECTIONS)	SAND BAG
I		2 PCS	BASE COVER
J		1 PC	CENTER BASE COVER
K		1 PC	KNOB

SAVE THESE INSTRUCTIONS

SONOMA 10.5 FT CANTILEVER UMBRELLA ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR33CL

ASSEMBLE ON A FLAT, PROTECTED SURFACE.

L		1 PC	STRAIGHT POLE
M		1 PC	UMBRELLA
N		1 PC	SOLAR RECEIVER
O		1 PC	CRANK HANDLE
P		4 PCS + 1 PC	HEX BOLT (M8X20MM)
Q		4 PCS + 1 PC	FLAT WASHER
R		2 PCS + 1 PC	BUTTON HEAD BOLT (M5X8MM)
S		2 PC + 1 PC	FLAT HEAD BOLT (M6X15MM)
T		4 PCS	REPLACEMENT LIGHT
U		4 PCS	REPLACEMENT LIGHT COVER
V		1 PC	WRENCH
W		1 PC	SMALL ALLEN WRENCH
X		1 PC	LARGE ALLEN WRENCH


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR33CL

STEP 1


A. PLACE LOWER BRACKET (A) ON A FLAT, PROTECTED SURFACE.

B. INSERT UPPER BRACKET (B) INTO LOWER BRACKET (A).

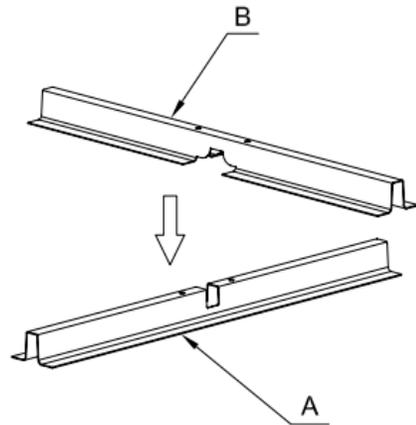


STEP 2

A. CONNECT BASE POLE (C) TO LOWER BRACKET (A) AND UPPER BRACKET (B) WITH HEX BOLTS (P) AND FLAT WASHERS (Q) USING WRENCH (V). TIGHTEN COMPLETELY.

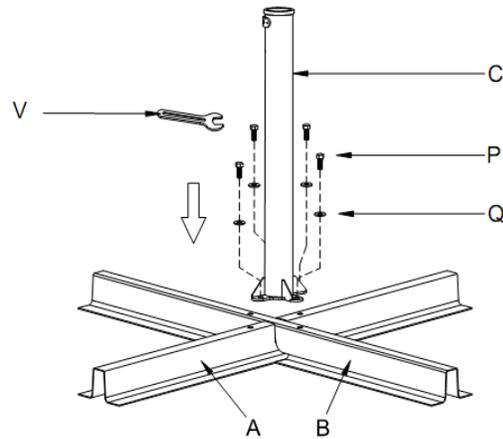

STEP 3

A. ATTACH CORNER CONNECTORS (D) INTO THE ENDS OF THE ASSEMBLED BRACKETS (A & B).

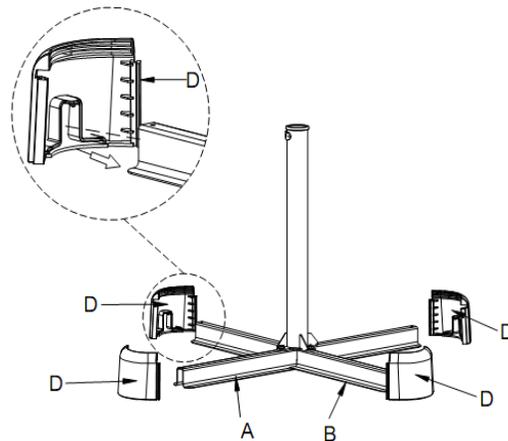


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR33CL


STEP 4

A. SLIDE SIDE PANELS WITH LOCKS (E) DOWNWARD ONTO CORNER CONNECTORS (D) AS SHOWN.

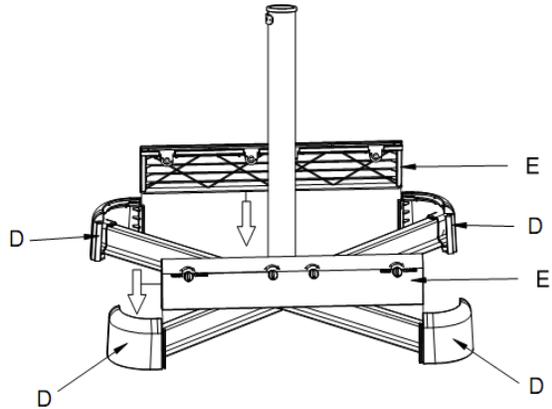


STEP 5

A. SLIDE SIDE PANELS (F) DOWNWARD ONTO CORNER CONNECTORS (D) AS SHOWN.

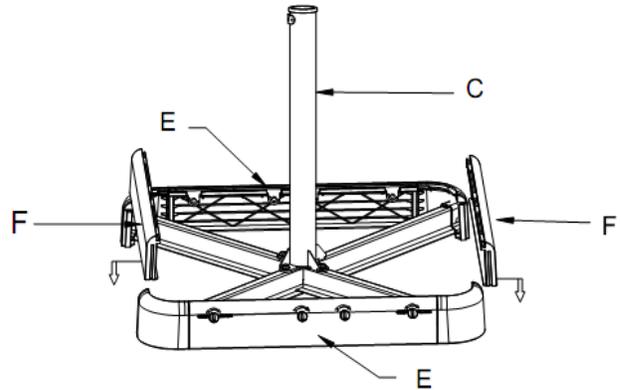

STEP 6

A. CONNECT THE SUPPORT TUBE RIMS (G) AND SLIDE ONTO BASE POLE (C).

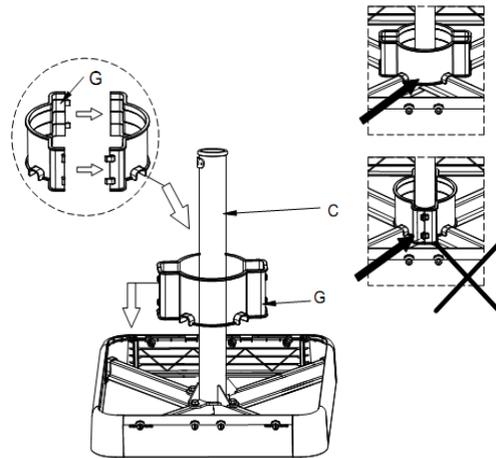


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR33CL

STEP 7

A. PLACE THE UMBRELLA BASE INTO THE DESIRED POSITION/LOCATION PRIOR TO FILLING THE SAND BAGS (H) WITH SAND, NOT INCLUDED.

B. PLACE SAND BAGS (H) IN THE ASSEMBLED UNIT ALIGNING EDGES AGAINST SIDE PANELS (E & F). ALIGN CONNECTING STRAPS AT CENTER.

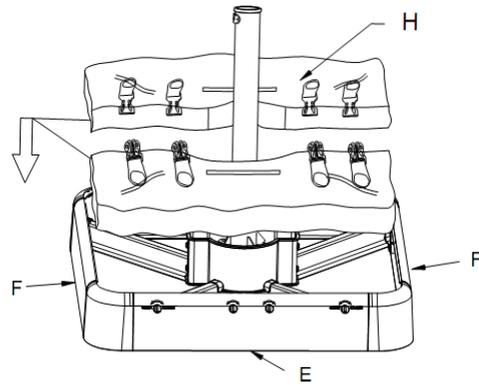


STEP 8

NOTE: FOR USE WITH SAND ONLY

A. OPEN THE POUCH OF THE SAND BAGS (H) AND POUR THE SAND, NOT INCLUDED, INTO THE OPENING. PUSH SAND DOWNWARD INTO BOTTOM CORNERS. PUSH SAND UPWARD INTO TOP CORNERS.

* FOR PROPER STABILITY, FILL THE SAND BAGS WITH THE RECOMMENDED MINIMUM WEIGHT PER SAND BAG IS 110 LBS COMBINED BAGS = 220 LBS MINIMUM) DO NOT UNDER FILL.


B. SECURELY CLOSE POUCHES AND LOCK THE SAND BAGS (H) TOGETHER AT CENTER WITH CLIPS.

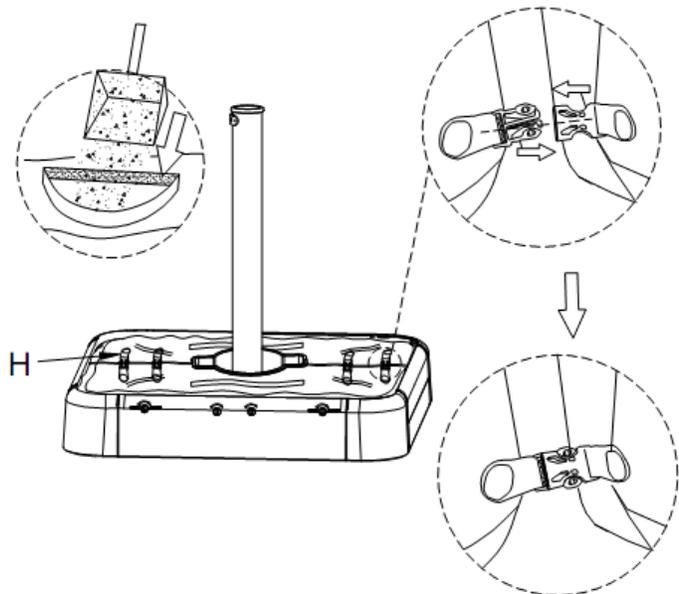

STEP 9

A. BEFORE ASSEMBLING THE BASE COVERS (I), CHECK TO MAKE SURE THE LOCKS ON THE COVERS ARE POSITIONED CORRECTLY AS SHOWN.

B. CONNECT BASE COVERS (I) TO THE SIDE PANELS (E & F).

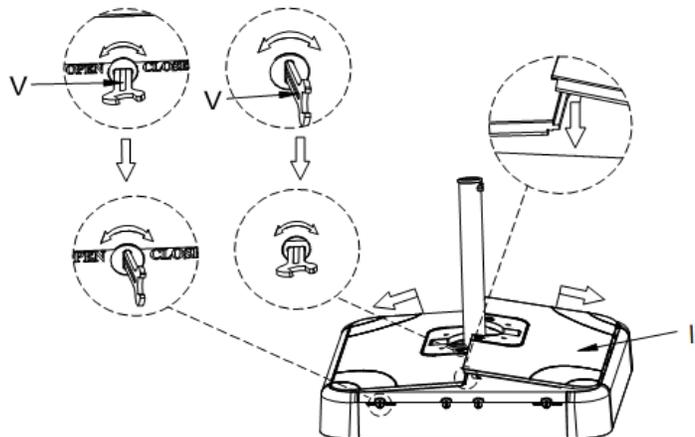


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR33CL

STEP 10

A. TURN ALL 12 LOCKS CLOCKWISE TO LOCK USING THE END OF THE WRENCH (V).


B. SLIDE CENTER BASE COVER (J) ON TOP OF ASSEMBLED UNIT AND INSERT BOTTOM CONNECTION POINTS INTO BASE COVERS (I).

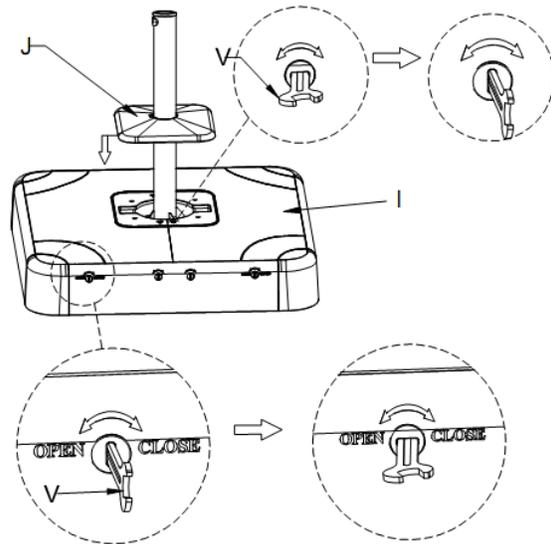

STEP 11


A. ATTACH KNOB (K) TO BASE POLE (C) KEEPING THE FINGER IN THE UP POSITION WITH BUTTON HEAD BOLTS (R) USING SMALL ALLEN WRENCH (W). TIGHTEN COMPLETELY.

B. TURN KNOB (K) UNTIL FINGER IS IN THE DOWN POSITION.

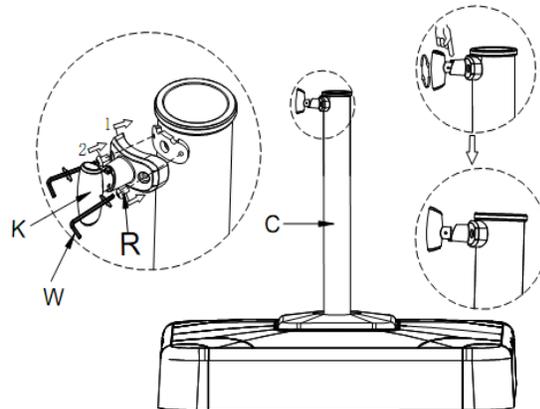

STEP 12

A. SLIDE STRAIGHT POLE (L) THROUGH THE HANDLE OF UMBRELLA (M).

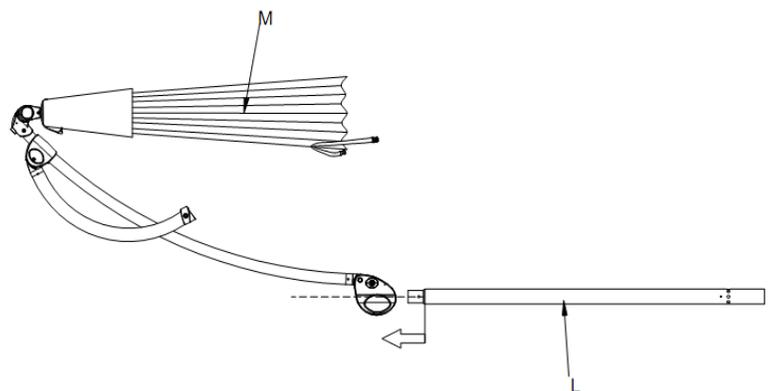


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR33CL

STEP 13


A. INSERT BENT POLE OF UMBRELLA (M) INTO STRAIGHT POLE (L). ALIGN HOLES AND INSERT FLAT HEAD BOLTS (S) USING LARGE ALLEN WRENCH (X). TIGHTEN COMPLETELY.

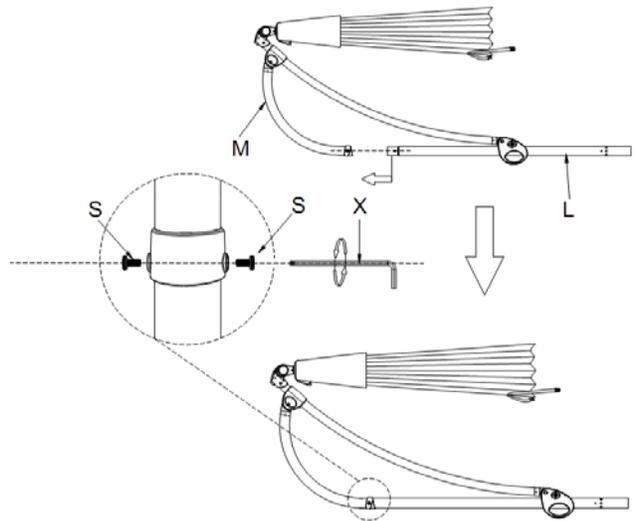

STEP 14

A. CONNECT SOLAR RECEIVER (N) TO TOP OF UMBRELLA (M). TIGHTEN COMPLETELY.


B. INSERT THE PLUG ON THE TOP OF THE UMBRELLA (M) INTO THE PLUG HOLE ON THE UNDERSIDE OF THE SOLAR RECEIVER (N).

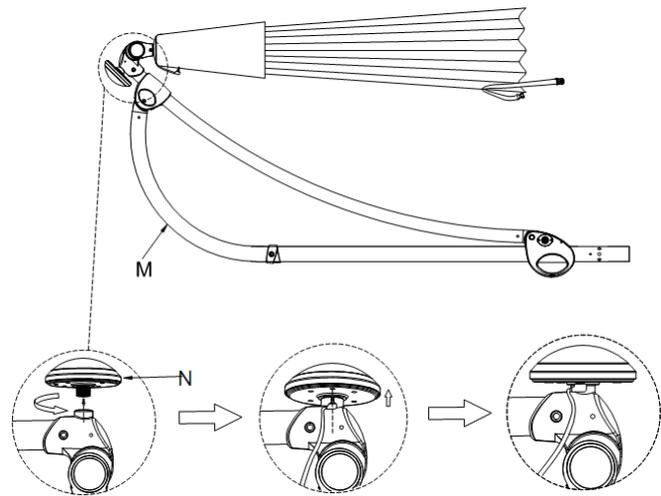

STEP 15

A. INSERT STRAIGHT POLE (L) OF ASSEMBLED UMBRELLA INTO BASE POLE (C).

B. TURN KNOB (K) UNTIL FINGER IS IN THE UP POSITION AND STRAIGHT POLE (L) IS SECURED.

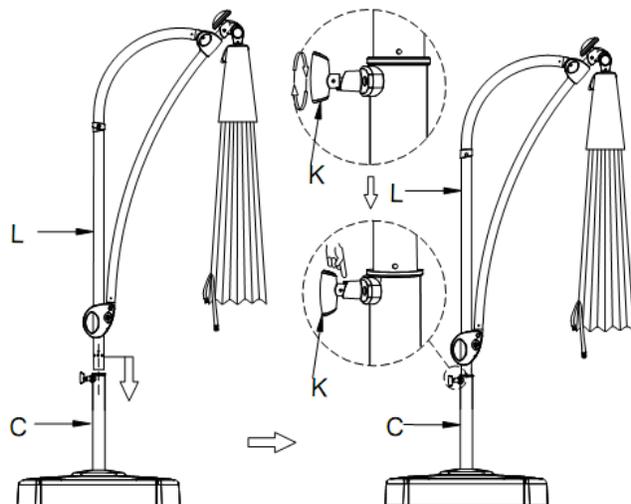


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR33CL

STEP 16

A. ATTACH CRANK HANDLE (O) TO HANDLE ON UMBRELLA (M)

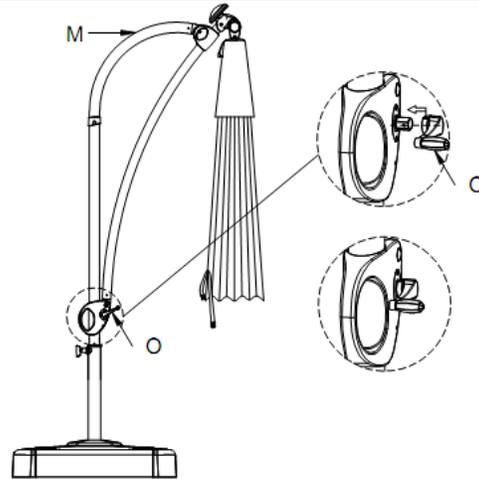


STEP 17

A. TO UNLOCK UMBRELLA HANDLE, TURN DIAL ON HANDLE OF UMBRELLA (M) COUNTER CLOCKWISE.

B. SLIDE THE UMBRELLA HANDLE UPWARD ON STRAIGHT POLE (L) UNTIL IT IS FULLY EXTENDED.

C. TO LOCK UMBRELLA HANDLE, TURN DIAL ON HANDLE OF UMBRELLA (M) CLOCKWISE.


D. STRAIGHTEN THE UMBRELLA FABRIC.

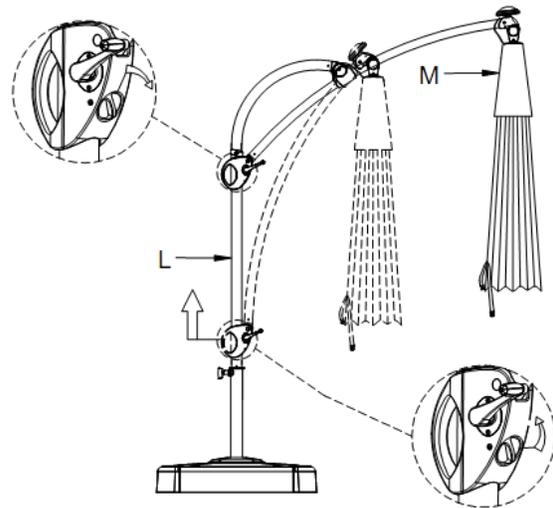

STEP 18

A. TO OPEN THE CANOPY, TURN THE CRANK (O) CLOCKWISE. DO NOT OVER EXTEND.

B. ANCHOR THE CANOPY TO THE POLE USING THE ATTACHED STRAP.

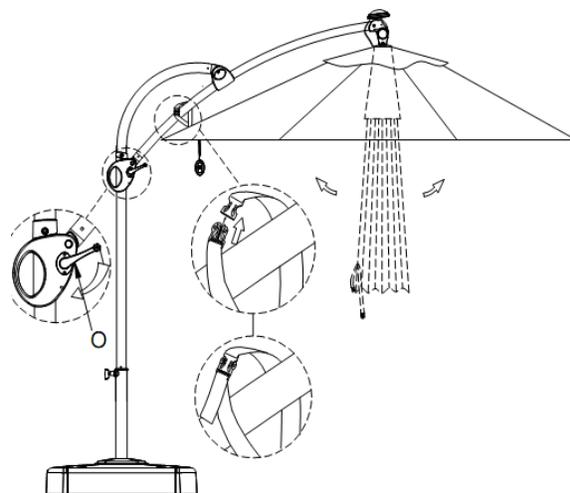

ASSEMBLY INSTRUCTIONS (CONTINUED)


STYLE #: 61SRR33CL

STEP 19

A. PRESS THE LIGHT SWITCH TO TURN THE LIGHTS ON AND OFF.

B. TO ADJUST THE ANGLE OF THE CANOPY, TURN THE DIAL ON THE HANDLE COUNTER CLOCKWISE THEN SLIDE THE HANDLE UP OR DOWN ON THE STRAIGHT POLE (L) UNTIL THE DESIRED ANGLE IS ACHIEVED.

C. TURN THE DIAL CLOCKWISE TO LOCK THE HANDLE IN PLACE.

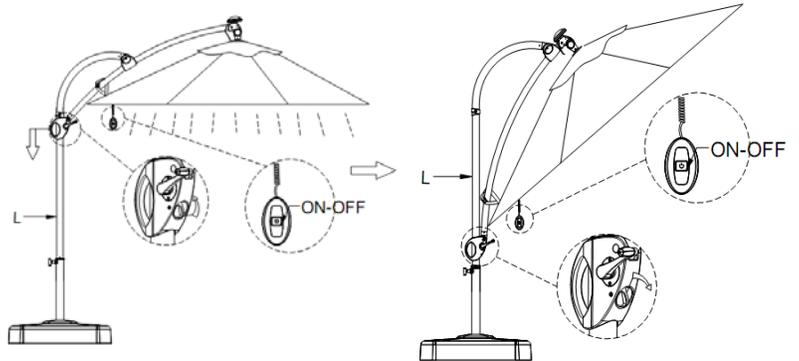


STEP 20

A. TO ROTATE/SWIVEL THE CANOPY, TURN KNOB (K) UNTIL THE FINGER IS IN THE DOWN POSITION.

B. USE 1 HAND TO HOLD THE STRAIGHT POLE (L) AND THE OTHER HAND TO SLOWLY TURN THE UMBRELLA.

C. WHEN AT THE DESIRED POSITION, TURN KNOB (K) UNTIL FINGER IS IN THE UP POSITION AND STRAIGHT POLE (L) IS SECURED.

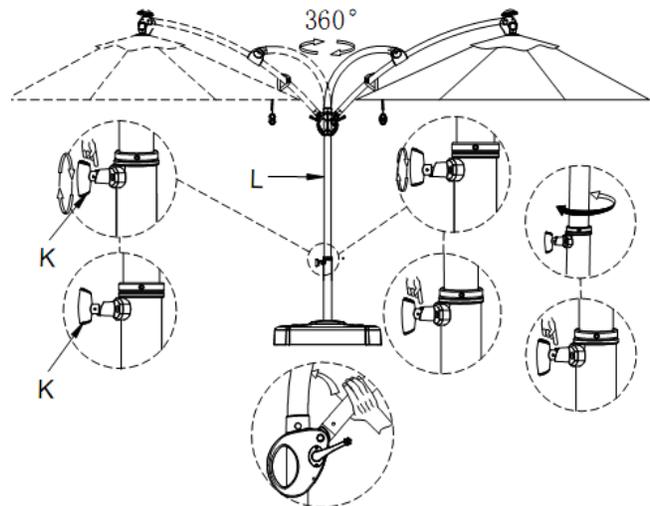


STEP 21

A. TO CLOSE UMBRELLA, DISCONNECT UMBRELLA ANCHOR STRAP. TURN THE CRANK HANDLE (O) COUNTER CLOCKWISE.

B. WHEN CANOPY IS CLOSED, TURN THE DIAL ON THE HANDLE COUNTER CLOCKWISE TO UNLOCK. PULL THE HANDLE DOWNWARD UNTIL IT STOPS.

C. TURN THE DIAL ON THE HANDLE CLOCKWISE TO LOCK THE HANDLE IN THE CLOSED POSITION.

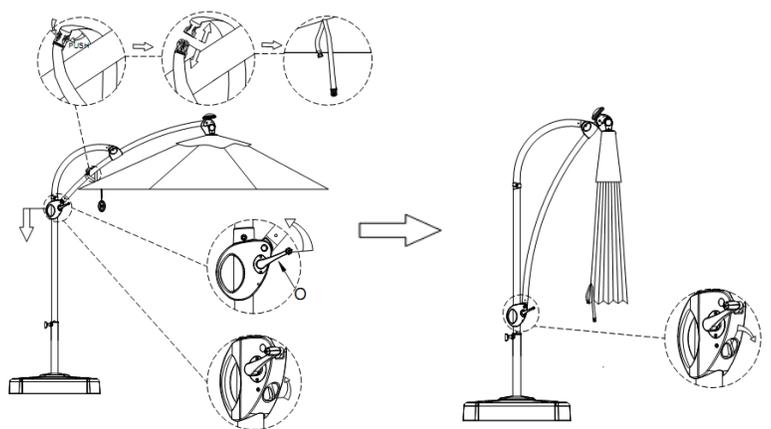


ASSEMBLY INSTRUCTIONS (CONTINUED)

STYLE #: 61SRR33CL

STEP 22

A. WRAP ANCHOR STRAP AROUND CLOSED CANOPY TO SECURE TO THE UMBRELLA FRAME.

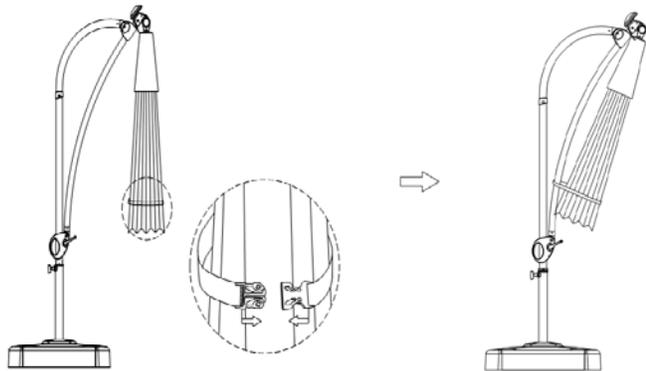


STEP 23

A. TO REPLACE LIGHT BULBS AS NEEDED, UNSCREW THE LIGHT COVER AND REMOVE THE LIGHT BULB.

B. INSERT REPLACEMENT LIGHT (T) MATCHING THE POSITIVE AND NEGATIVE POLES (BLACK = NEGATIVE, RED = POSITIVE).

C. SCREW ON LIGHT COVER.

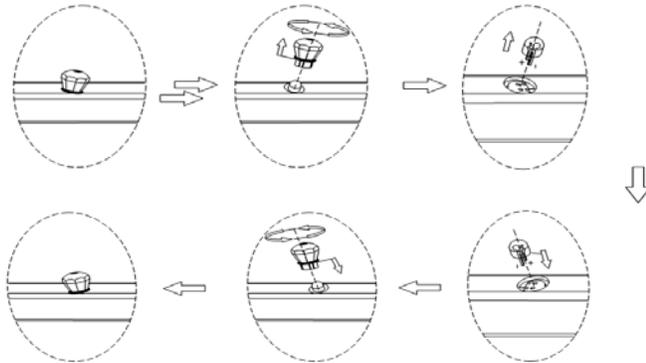

** WE RECOMMEND THAT YOU SAVE THE WRENCH AND ALLEN WRENCH AND PERIODICALLY TIGHTEN ALL BOLTS.

WEIGHT LIMIT

BASE: 250 LBS

CARE AND CLEANING

FOR OUTDOOR USE ONLY

ONLY USE WITH WEIGHTED UMBRELLA BASE

CLOSE UMBRELLA WHEN NOT IN USE AND DURING WINDY CONDITIONS

COVER THE PRODUCT DURING INCLEMENT WEATHER AND MOVE INTO A COVERED STORAGE DURING THE OFF-SEASON.

KEEP AWAY FROM FIRE AND FLAME

TO SPOT CLEAN, HAND WASH WITH MILD SOAP AND COOL WATER. DO NOT USE ABRASIVE MATERIAL, CLEANSERS OR BLEACH PRODUCTS.

DO NOT USE SHARP TOOLS WITH THIS PRODUCT AS IT MAY SCRATCH THE METAL FINISH.

WARRANTY

2 YEAR LIMITED WARRANTY FOR FRAME. DO NOT RETURN THIS ITEM TO THE RETAILER. CUSTOMER SERVICE HOTLINE: 1-866-905-4107 OR WWW.YOTRIOINT.COM

TO ASSIST YOU BETTER, PLEASE GATHER THE FOLLOWING INFORMATION BEFORE CALLING CUSTOMER SERVICE: PRODUCT NAME AND STYLE NUMBER, DESCRIPTION AND OR IMAGES OF THE ISSUE, ORIGINAL STORE PURCHASE RECEIPT.