















SAVE THESE INSTRUCTIONS
CAMERON MUDROOM BENCH ASSEMBLY INSTRUCTIONS
STYLE#: 53SNR4501HAZ
ASSEMBLE ON A FLAT, PROTECTED SURFACE

PART LIST	FIGURE	QUANTITY	DESCRIPTION
A		1 PC	TOP
B		1 PC	SHELF
C		1 PC	CUSHION
D		1 PC	RIGHT SIDE FRAME
E		1 PC	LEFT SIDE FRAME
F		1 PC	DIVIDER
G		2 PCS	BASKET
H		2 PCS	BASKET BOTTOM
I		12 PCS + 1PC	BOLT
J		12 PCS + 1 PC	FLAT WASHER
K		1 PC	ALLEN WRENCH
L		10 PCS + 1PC	WOOD DOWEL
M		1 PC	CENTER LEG


SAVE THESE INSTRUCTIONS
STYLE#: 53SNR4501HAZ
ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 1

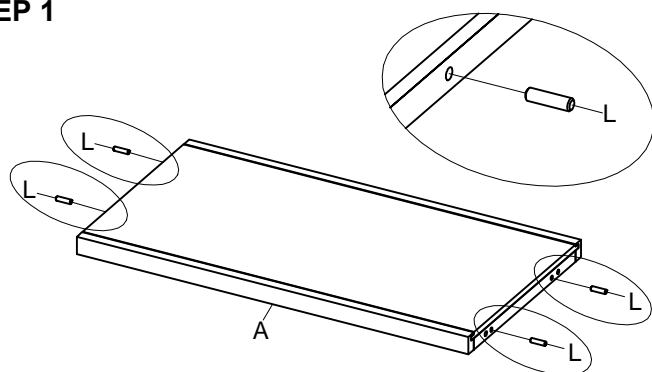


A. INSERT WOOD DOWELS (L) INTO DOWEL HOLES ON TOP (A) .

STEP 2

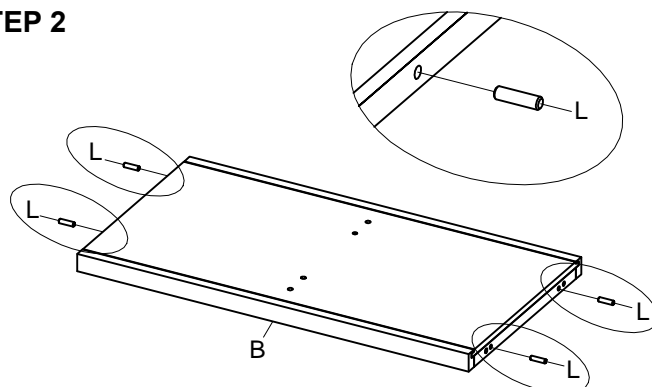


A. INSERT WOOD DOWEL (L) INTO DOWEL HOLES ON SHELF (B).

STEP 3

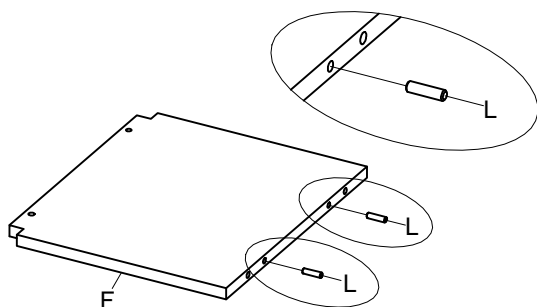


A. INSERT WOOD DOWELS (L) INTO DOWEL HOLES ON DIVIDER (F).

STEP 4

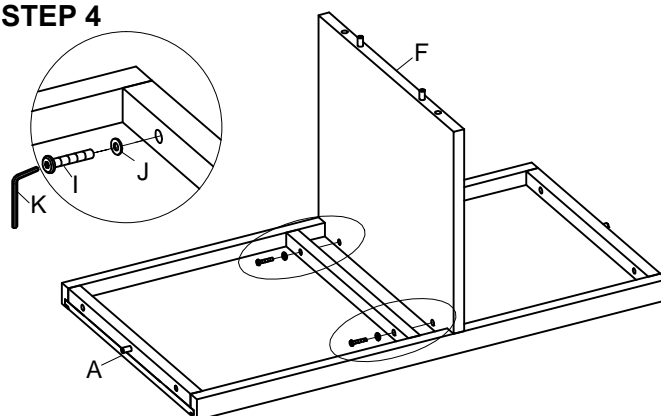


A. ATTACH DIVIDER (F) TO TOP (A) WITH BOLTS (I), FLAT WASHERS (J) AND LOOSELY TIGHTEN USING ALLEN WRENCH (K).

STEP 5

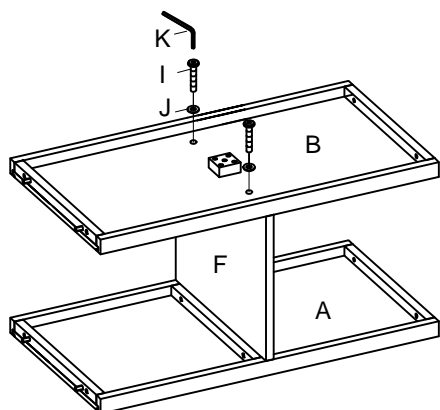

A. ATTACH SHELF (B) TO DIVIDER (F) WITH BOLTS (I), FLAT WASHERS (J) AND LOOSELY TIGHTEN USING ALLEN WRENCH (K).


STEP 6

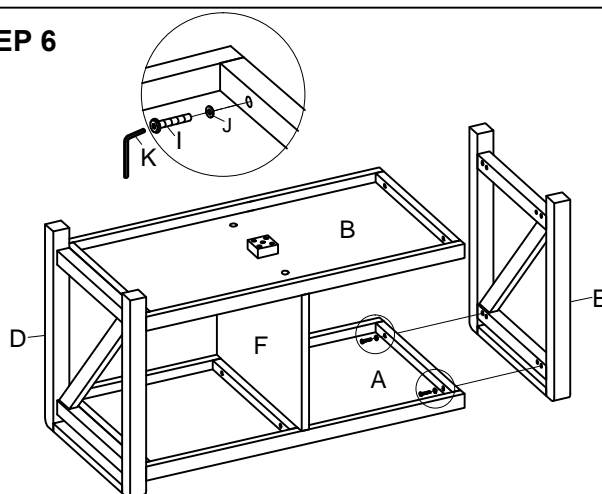

A. CONNECT RIGHT SIDE FRAME (D) TO TOP (A) AND SHELF (B) WITH BOLTS (I), FLAT WASHERS (J) AND LOOSELY TIGHTEN USING ALLEN WRENCH (K).
 B. REPEAT FOR LEFT SIDE FRAME (E) ASSEMBLY.


SAVE THESE INSTRUCTIONS
STYLE#: 53SNR4501HAZ
ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 7

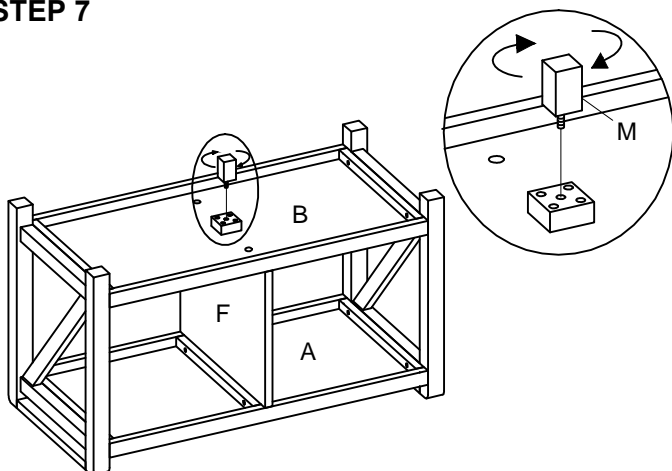



A. ATTACH CENTER LEG (M) TO THE BACK OF SHELF (B) AS SHOWN.

STEP 8

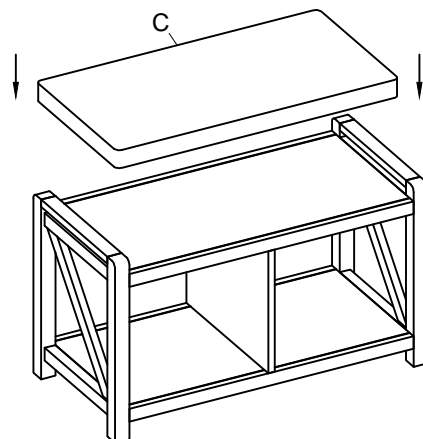


A. ROTATE ASSEMBLED UNIT TO UPRIGHT POSITION.
 B. PLACE CUSHION (C) ON BENCH TOP (A).

STEP 9

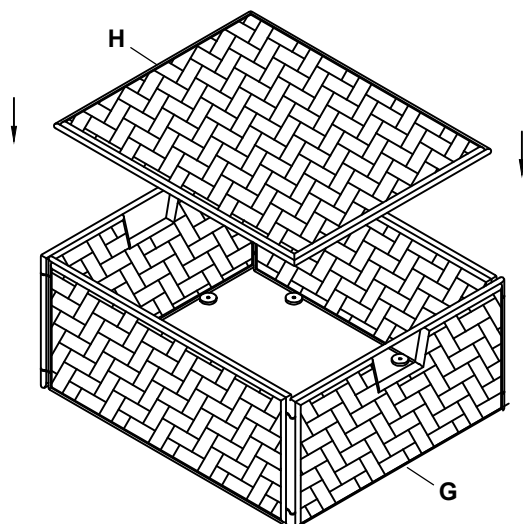


INCORRECT



CORRECT

A. INSERT BASKET BOTTOM (H) INTO BASKET (G).
 B. REPEAT FOR REMAINING BASKETS.
 C. IF ANY BASKET BUMPERS OR PADS WERE BENT OR DISLODGED DURING TRANSIT, GENTLY REPOSITION SO THE BUMPERS ARE LEVEL WITH THE BOTTOM OF THE BASKET AND THE PADS ARE CENTERED ON THE BUMPERS.

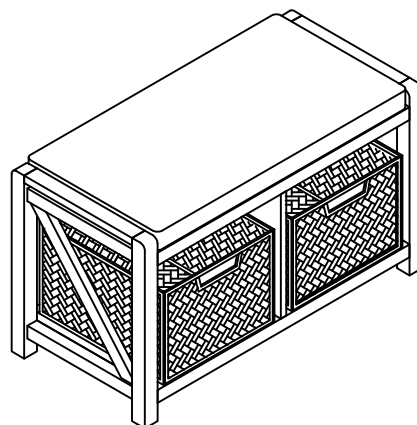

A. PLACE THE ASSEMBLED BASKETS ONTO SHELF (B) AS SHOWN.

**** WE RECOMMEND THAT YOU SAVE THE ALLEN WRENCH (K) AND PERIODICALLY TIGHTEN ALL BOLTS. PLEASE MAKE SURE ALL BOLTS ARE PLACED IN THEIR PROPER POSITION AND ARE TIGHTENED SECURELY TO ENSURE YOUR SAFETY.**

1. WIPE CLEAN WITH A SOFT, DRY CLOTH AS NEEDED.
2. BASKETS: DO NOT BRING IN CONTACT WITH WATER OR LIQUIDS. WIPE CLEAN WITH A SOFT, DRY CLOTH AS NEEDED.
3. DO NOT STAND, CLIMB OR JUMP ON THE BENCH.
4. WEIGHT RESTRICTION: TOP: 250 LBS, SHELF: 100 LBS, BASKETS: 30 LBS EACH.
5. INTENDED FOR INDOOR USE ONLY.