SAVE THESE INSTRUCTIONS SET OF 2 CAMERON COUNTER STOOLS ASSEMBLY INSTRUCTIONS ASSEMBLE ON A FLAT, PROTECTED SURFACE PHILLIPS HEAD SCREWDRIVER NEEDED FOR ASSEMBLY; NOT INCLUDED

ART LIST	FIGURE	QUANTITY	DESCRIPTION
A		2 PCS	SEAT
В		4 PCS	LEFT LEG
С		4 PCS	RIGHT LEG
D		4 PCS	LONG STRETCHER
E		4 PCS	SHORT STRETCHER
F	0	8 PCS + 1 PC	SPRING WASHER
G	0	8 PCS + 1 PC	FLAT WASHER
Н	()	8 PCS + 1 PC	1/4" x 2-1/4" BOLT
I		16 PCS + 1 PC	5/16" X 1-1/2" WOOD SCREW
J	í	1 PC	ALLEN WRENCH

REFER TO LAST PAGE FOR ADDITIONAL CUSTOMER SERVICE DETAILS.

ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 1

A. PLACE SEAT (A) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.

B. ATTACH LEFT LEGS (B) AND RIGHT LEGS (C) TO SEAT (A) AS SHOWN WITH BOLTS (H), SPRING WASHERS (F) AND FLAT WASHERS (G).

C. LOOSELY TIGHTEN USING ALLEN WRENCH (J).

STEP 2

A. INSERT LONG STRETCHERS (D) INTO LEFT LEGS (B) AND RIGHT LEGS (C) AS SHOWN.

B. INSERT SHORT STRETCHERS (E) INTO LEFT LEGS (B) AND RIGHT LEGS (C) AS SHOWN.

STEP 3

A. ATTACH ALL THE STRETCHERS TO LEFT LEGS (B) & RIGHT LEGS (C) USING WOOD SCREWS (I).

B. FULLY TIGHTEN ALL SCREWS (I) WITH A PHILLIPS HEAD SCREWDRIVER (NOT INCLUDED).

ASSEMBLY INSTRUCTIONS (CONTINUED)


STEP 4

A. ROTATE ASSEMBLED UNIT TO UPRIGHT POSITION.

B. CHECK AND MAKE SURE ALL LEGS TOUCH THE FLOOR.

C. FULLY TIGHTEN ALL BOLTS USING ALLEN WRENCH (J).

D. REPEAT ALL STEPS FOR SECOND STOOL ASSEMBLY.

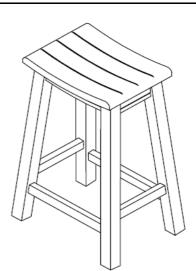

** WE RECOMMEND THAT YOU SAVE THE ALLEN WRENCH AND PERIODICALLY TIGHTEN ALL BOLTS.

WEIGHT LIMIT:

TOP: 300 LBS **CARE AND CLEANING** WIPE CLEAN WITH A SOFT, DRY CLOTH AS NEEDED. DO NOT SIT, STAND, OR CLIMB ON THE STOOL INTENDED FOR INDOOR USE ONLY.

FOR MISSING OR INCORRECT PARTS/HARDWARE, CONTACT THE MANUFACTURER'S CUSTOMER SERVICE DIRECTLY AT 1-847-608-5202 OR CUSTOMERSERVICE@HOMECIAO.COM