SAVE THESE INSTRUCTIONS

CLAREMONT RECLINER STYLE #: 61SRR4514CLR

ASSEMBLE ON A FLAT, PROTECTED SURFACE.


PART LIST	FIGURE	QUANTITY	DESCRIPTION
А		1 PC	RIGHT ARM
В		1 PC	LEFT ARM
С		1 PC	BACK
D		1 PC	CHAIR SEAT
Е		4 + 1 PCS	SHORT BOLT (M6*15)
F		4 + 1 PCS	MEDIUM BOLT (M6*28)
G		8 + 1 PCS	FLAT WASHER
Н		1 PC	ALLEN WRENCH
I	€÷	1 PC	BACK AND SEAT CUSHION

CLAREMONT RECLINER STYLE #: 61SRR4514CLR ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 1


A. PLACE CHAIR SEAT (D) UPSIDE DOWN ON A FLAT, PROTECTED SURFACE.

B. CONNECT BACK (C) TO SEAT (D) WITH FLAT WASHER (G) AND SHORT BOLT (E) USING ALLEN WRENCH (H) . DO NOT TIGHTEN COMPLETELY.

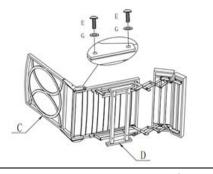


STEP 2

A. CONNECT RIGHT ARM (A) TO SEAT (D) WITH FLAT WASHER (G) AND MEDIUM BOLT (F) USING ALLEN WRENCH (H). DO NOT TIGHTEN COMPLETELY.

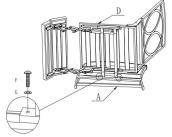

STEP 3

A. CONNECT LEFT ARM (B) TO SEAT (D) WITH FLAT WASHER (G) AND MEDIUM BOLT (F) USING ALLEN WRENCH (H). DO NOT TIGHTEN COMPLETELY.

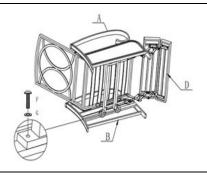

CLAREMONT RECLINER STYLE #: 61SRR4514CLR ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 4

A. TURN THE UNIT RIGHT SIDE UP.

B. TIGHTEN ALL BOLTS SECURELY USING WRENCH (H).



STEP 5

A. PUT THE SEAT AND BACK CUSHION (I) ON THE SEAT (D), WITH VELCRO TIE ON THE CHAIR, THEN PUT ON THE BACK CUSHION.

B. KEEP ALLEN WRENCH (H) TO TIGHTEN BOLTS PERIODICALLY AS NEEDED.



WEIGHT LIMIT

250 LBS

CARE AND CLEANING

IN ORDER TO PROLONG THE LIFE OF YOUR CHAIR, PLEASE STORE IN DRY SHELTERED PLACE WHEN NOT IN USE OR DURING INCLEMENT WEATHER.

WARRANTY

1 YEAR LIMITED WARRANTY FOR FRAME.

CUSTOMER SERVICE: PLEASE NOTE - DO NOT RETURN THIS ITEM TO THE RETAILER.

CUSTOMER SERVICE HOT LINE: 1-866-905-4107

SERVICE HOURS: 11:30 A. M to 8:00 P. M EASTERN STANDARD TIME /8:30 A. M to 5:00 P. M PACIFIC STANDARD TIME.

WEBSITE: WWW.YOTRIOINT.COM

TO ASSIST YOU BETTER, PLEASE GATHER THE FOLLOWING INFORMATION BEFORE CALLING CUSTOMER SERVICE: PRODUCT NAME AND STYLE NUMBER, DESCRIPTION AND OR IMAGES OF THE ISSUE, ORIGINAL STORE PURCHASE RECEIPT.